

Part Number	Aircraft Model	Description	Acceptable Cores
100-524074-1	1900	100-524074-1 : GEAR BOX ASSEMBLY	100-524074-1
101-381015-9	1900	101-381015-9 : VALVE ASSEMBLY	101-381015-5 or 101-381015-9
101-384004-13	1900	101-384004-13 : BLOWER ASSEMBLY	101-384004-9 OR 101-384004-13
103646-1	1900	103646-1 : OUTFLOW VALVE	103646-1
103646-4	1900	103646-4 : OUTFLOW VALVE	103646-4 or 103646-1
107312-10	1900	107312-10 : RELAY	107312-10
112-380022-23	1900	112-380022-23 : ACTUATOR	112-380022-15 (may include upgrade charges) 112-380022-23
114-364140-7	1900	114-364140-7 : PCB MODULE ASSEM	114-364140-7
114-380004-5	1900	114-380004-5 : INDICATOR	114-380004-5
114-380004-7	1900	114-380004-7 : ITT INDICATOR	114-380004-7
114-380004-9	1900	114-380004-9 : INTERSTAGE TURBINE TEMP INDICATOR	114-380004-9
114-380006-5	1900	114-380006-5 : PROP TACHOMETER	114-380006-5
114-380007-5	1900	114-380007-5 : TURBINE TACHOMETER	114-380007-5
114-380009-7	1900	114-380009-7 : OIL TEMP & OIL PRESSURE INDICATOR	114-380009-7
114-380010-1	1900	114-380010-1 : TURN & BANK	114-380010-1
114-380012-3	1900	114-380012-3 : MAX ALLOW INDICATOR	114-380012-1 or 114-380012-3
114-380017-5	1900	114-380017-5 : CABIN DIFF PRESSURE INDICATOR	114-380017-5
114-380020-1	1900	114-380020-1 : CABIN AIR TEMP INDICATOR	114-380020-1
114-380021-1	1900	114-380021-1 : OXYGEN QUANTITY INDICATOR	114-380021-1
114-380026-3	1900	114-380026-3 : IND, SUCTION GAGE	114-380026-3
114-380027-3	1900	114-380027-3 : PNEUMATIC PRESSURE IND	114-380027-3
114-380027-5	1900	114-380027-5 : PNEUMATIC PRESSURE INDICATOR	114-380027-5
114-380028-11	1900	114-380028-11 : CABIN VENT BLOWER ASSEMBLY	114-380028-1, 114-380028-3, 114-380028-5, 114-380028-7, 114-380028-9, 114-380028-11
114-380028-9	1900	114-380028-9 : CABIN VENT BLOWER ASSEMBLY	114-380028-1, 114-380028-3, 114-380028-5, 114-380028-7, 114-380028-9
114-380031-1	1900	114-380031-1 : DC LOAD INDICATOR	114-380031-1
114-380032-1	1900	114-380032-1 : INDICATOR, DC VOLT	114-380032-1
114-380033-1	1900	114-380033-1 : VOLT FREQUENCY INDICATOR	114-380033-1
114-380034-9	1900	114-380034-9 : FUEL QTY INDICATOR	114-380034-9
114-380035-1	1900	114-380035-1 : IVSI INDICATOR	114-380035-1
114-380041-15	1900	114-380041-15 : HYDRAULIC ACTUATOR ASSY	114-380041-15 OR 114-380041-17
114-380041-17	1900	114-380041-17 : HYDRAULIC ACTUATOR ASSY	114-380041-17
114-380042-17	1900	114-380042-17 : VALVE	114-380042-17
114-380042-21	1900	114-380042-21 : PRESSURE REGULATOR/SHUTOFF VALVE	114-380042-21
114-380049-9	1900	114-380049-9 : PROP AMP INDICATOR	114-380049-9
114-380051-1	1900	114-380051-1 : STALL LIFT TRANSDUCER	114-380051-1
114-380059-5	1900	114-380059-5 : PRESSURE REGULATOR	114-380059-5
114-380063-5	1900	114-380063-5 : TURBINE TACH	114-380063-5
114-380065-3	1900	114-380065-3 : INDICATOR-TORQUE	114-380065-3
114-380066-3	1900	114-380066-3 : INDICATOR-PROP RPM	114-380066-3
114-380066-5	1900	114-380066-5 : INDICATOR-PROP RPM	114-380066-5
114-381002-7	1900	114-381002-7 : BRAKE DEICE VALVE	114-381002-5 or 114-381002-7
114-381023-7	1900	114-381023-7 : ELECTRICAL POWER PANEL (1900C SERIES)	114-381023-7
114-384021-1	1900	114-384021-1 : VALVE ASSY	114-384021-1
114-388000-13	1900	114-388000-13 : HYDRAULIC POWER PACK	114-388000-13 or 114-388000-9
114-388024-1	1900	114-388024-1 : BRAKE ASSY	114-388024-1
114-389000-5	1900	114-389000-5 : COOLER ASSEMBLY, OIL	114-389000-5
114-389030-1	1900	114-389030-1 : TRANSMITTER FUEL FLOW	114-389030-1
114-389039-21	1900	114-389039-21 : ICE VANE ACTUATOR	114-389039-21
114-389040-29	1900	114-389040-29 : FUEL LEVEL SENSOR	114-389040-29
114-389042-5	1900	114-389042-5 : FUEL PUMP	114-389042-5
114-389043-5	1900	114-389043-5 : FUEL PUMP	114-389043-5
114-820052-9	1900	114-820052-9 : DAMPER ASSEM	114-820052-9
118-380000-1	1900	118-380000-1 : FUEL QTY INDICATOR	118-380000-1
118-389004-41	1900	118-389004-41 : FUEL GAGING SYSTEM	118-389004-41

118-389004-43	1900	118-389004-43 : FUEL GAGING SYSTEM	118-389004-43
118-389004-47	1900	118-389004-47 : FUEL GAGING SYSTEM	118-389004-47
118-389004-49	1900	118-389004-49 : FUEL GAGING SYSTEM	118-389004-49
129-364079-7	1900	129-364079-7 : MODULE ASSEMBLY-POWER SOURCE,ANNUNCIATOR	129-364079-7
129-364091-9	1900	129-364091-9 : PC BOARD ASSEMBLY-AUTOFEATHER}	129-364091-9
129-380001-1	1900	129-380001-1 : VALVE ASSEMBLY	129-380001-1
129-380001-11	1900	129-380001-11 : TEMP SENSOR	129-380001-11
129-380001-13	1900	129-380001-13 : VALVE ASSY	129-380001-13
129-380002-1	1900	129-380002-1 : FLAP POSITION INDICATOR	129-380002-1
129-380004-3	1900	129-380004-3 : TORQUE INDICATOR	129-380004-3
129-380008-3	1900	129-380008-3 : INDICATOR VACUUM GAUGE	129-380008-3
129-380016-1	1900	129-380016-1 : ELECTRICAL - POWER PANEL ASSEMBLY	129-380016-1
129-381000-1	1900	129-381000-1 : WING TIP NAV LIGHT W/STROBE	129-381000-1
129-389001-11	1900	129-389001-11 : ISOLATOR PAD	129-389001-11
129-514106-49	1900	129-514106-49 : STRUT ASSEMBLY-AIRSTAIR DOOR	129-514106-49
129-521050-1	1900	129-521050-1 : ACTUATOR ASSEM-FLAP-INBD	129-521050-1 or 50-521222-3
129-521051-2	1900	129-521051-2 : ACTUATOR ASSEM, FLAP	129-521051-2 or 50-521222-4
130374-29	1900	130374-29 : PRESSURIZATION CONTROLLER	130374-29
130374-32	1900	130374-32 : CABIN PRESSURE CONTROLLER	130374-32
130-380005-7	1900	130-380005-7 : AIRSPEED INDICATOR (MAX ALLOWABLE)	130-380005-7
130-380041-13	1900	130-380041-13 : INDICATOR, ITT	130-380041-13
130-380041-5	1900	130-380041-5 : INDICATOR-ITT	130-380041-5
130-380044-15	1900	130-380044-15 : INDICATOR-TURBINE RPM	130-380044-15
130-380044-5	1900	130-380044-5 : INDICATOR-TURBINE RPM	130-380044-5
130-380045-5	1900	130-380045-5 : INDICATOR-OIL TEMP & PRESS	130-380045-5
23078-019	1900	23078-019 : STARTER-GENERATOR	23078-019
28004-11-02	1900	28004-11-02 : ALTIMETER	28004-11-02 or 28004-01-02 (note: there will be an upgrade charge of \$4033.00 for this.)
501-1228-03	1900	501-1228-03 : POWER SUPPLY**RA	501-1228-03
540158-4-2	1900	540158-4-2 : MOTOR, ACTUATOR	540158-4-2
775635-5	1900	775635-5 : AIR CYCLE MACHINE	775635-5
801293-12	1900	801293-12 : REGULATOR & CYLINDER ASSEM *RA*	801293-12
801765-00	1900	801765-00 : REGULATOR ASSEM ALTITUDE COMPENSATED	801765-00
86400-1199	1900	86400-1199 : CLOCK	86400-1199
8-831-01-001	1900	8-831-01-001 : LFCU COMPUTER	8-831-01-001
99-380010-1	1900	99-380010-1 : VALVE ASSY BUTTERFLY	99-380010-1
99-388004-7	1900	99-388004-7 : LINEAR ACTUATOR	99-388004-7
99-389014-3	1900	99-389014-3 : TORQUE TRANSMITTER	99-389014-3
99-810057-651	1900	99-810057-651 : ACTUATOR ASSEM-MAI LANDING GEAR	99-810057-651 or 99-810057-653
99-810057-652	1900	99-810057-652 : ACTUATOR ASSEM-MAIN LANDING GEAR	99-810057-652 or 99-810057-654
D60286	1900	D60286 : AIR DATA COMPUTER	D60286
HYLZ51071	1900	HYLZ51071 : CABIN TEMP CONTROLLER	HYLZ51071
SPC10(PW)	1900	SPC10(PW) : INVERTER	SPC10(PW)
0020BG1	BeechJet / Hawker 400XP	0020BG1 : STALL WARNING COMPUTER	0020BG1 OR 20BG1
01-0790033-25	BeechJet / Hawker 400XP	01-0790033-25 : ANTI-COLLISION LIGHT ASSY	01-0790033-25
01-0790080-00	BeechJet / Hawker 400XP	01-0790080-00 : POWER SUPPLY	01-0790080-00
0861EB	BeechJet / Hawker 400XP	0861EB : TRANSMITTER	0861EB
0871CT1	BeechJet / Hawker 400XP	0871CT1 : ICE DETECTOR	0871CT1
0871CT2	BeechJet / Hawker 400XP	0871CT2 : ICE DETECTOR	0871CT2
100-0206-01	BeechJet / Hawker 400XP	100-0206-01 : STANDBY BATTERY	100-0206-01
10450-11525	BeechJet / Hawker 400XP	10450-11525 : ALTIMETER	10450-11525
112-364021-1	BeechJet / Hawker 400XP	112-364021-1 : P C BOARD ASSEMBLY LOGIC RELAY (SPARE)	112-364021-1
112-364021-5	BeechJet / Hawker 400XP	112-364021-5 : PC BOARD ASSEMBLY - LOGIC RELAY	112-364021-5
1134400-1	BeechJet / Hawker 400XP	1134400-1 : COMPRESSOR/CONDENSER MODULE	1134400-1
1152058-1	BeechJet / Hawker 400XP	1152058-1 : TEMP CONTROLLER	1152058-1
122-382015-15	BeechJet / Hawker 400XP	122-382015-15 : STANDBY ATTITUDE INDICATOR	122-382015-11 or 122-382015-15
122-382142-13	BeechJet / Hawker 400XP	122-382142-13 : STANDBY ALTIMETER	122-382142-13

122-382142-3	BeechJet / Hawker 400XP	122-382142-3 : ALTIMETER PNEUMATIC 2 IN	122-382142-3
12411-9	BeechJet / Hawker 400XP	12411-9 : LEDGE ASSY-CONSOLE	12411-9
1250151	BeechJet / Hawker 400XP	1250151 : MOTOR	1250151
128-364108-7	BeechJet / Hawker 400XP	128-364108-7 : PRINTED CIRCUIT BOARD	128-364108-1 or 128-364108-7
128-364110-1	BeechJet / Hawker 400XP	128-364110-1 : P.C. BOARD ASSEM- ENG.START IGN RH	128-364110-1
128-364110-7	BeechJet / Hawker 400XP	128-364110-7 : P.C. BOARD ASSEMBY-ENGINE START & IGN RH	128-364110-7
128-380023-7	BeechJet / Hawker 400XP	128-380023-7 : STDBY MAX ALLOWABLE AIRSPEED INDICATOR	128-380023-1 OR 128-380023-7
128-380060-1	BeechJet / Hawker 400XP	128-380060-1 : DIGITAL CLOCK	128-380060-1
128-380067-15	BeechJet / Hawker 400XP	128-380067-15 : OXYGEN MASK ASSY	128-380067-7, -11, -13, -15, -19
128-380079-3	BeechJet / Hawker 400XP	128-380079-3 : VOLT AMMETER CLUSTER	128-380079-3
128-384028-1	BeechJet / Hawker 400XP	128-384028-1 : FAN TACHOMETER INDICATER	128-384028-1
128-384030-1	BeechJet / Hawker 400XP	128-384030-1 : FUEL QUANTITY INDICATOR (DUAL)	128-384030-1
128-384031-3	BeechJet / Hawker 400XP	128-384031-3 : FUEL QUANTITY INDICATOR	128-384031-3
128-384045-5	BeechJet / Hawker 400XP	128-384045-5 : TURBINE RPM INDICATOR	128-384045-3 OR 128-384045-5
128-384046-3	BeechJet / Hawker 400XP	128-384046-3 : FAN RPM INDICATOR	128-384046-1 OR 128-384046-3
128-384047-5	BeechJet / Hawker 400XP	128-384047-5 : TURBINE TEMP INDICATOR	128-384047-5
128-384054-1	BeechJet / Hawker 400XP	128-384054-1 : CONTROLLER - ICE PROTECTION SYSTEM	128-384054-1
128-384054-5	BeechJet / Hawker 400XP	128-384054-5 : SOLID STATE CONTACTOR	128-384054-5
128-384054-7	BeechJet / Hawker 400XP	128-384054-7 : SOLID STATE CONTACTOR. SEE MD04 NOTES	128-384054-7
130356-9	BeechJet / Hawker 400XP	130356-9 : CABIN PRESSURE CONTROL SYSTEM	130356-9
130358-3	BeechJet / Hawker 400XP	130358-3 : PNEUMATIC RELAY	130358-3
132-384028-1	BeechJet / Hawker 400XP	132-384028-1 : CONTROLLER	132-384028-1
174252-12	BeechJet / Hawker 400XP	174252-12 : CREW MASK	174252-12 or 128-380067-5
20BG1	BeechJet / Hawker 400XP	20BG1 : STALL WARNING COMPUTER	20BG1 OR 0020BG1
2103401-2	BeechJet / Hawker 400XP	2103401-2 : REGULATOR	2103401-2
225-0006-503	BeechJet / Hawker 400XP	225-0006-503 : DOOR ASSEM UP R T/R	225-0006-503
225-0012-509	BeechJet / Hawker 400XP	225-0012-509 : THRUST REVERSER	225-0012-509
225-0012-511	BeechJet / Hawker 400XP	225-0012-511 : THRUST REVERSER	225-0012-511
23111321-1	BeechJet / Hawker 400XP	23111321-1 : AIR BOTTLE L/G BLOW	23111321-1 or 23111321-1H
30400018-1	BeechJet / Hawker 400XP	30400018-1 : FIRE EXTINGUISHER*RA	30400018-1 or 30400018-3
30AN	BeechJet / Hawker 400XP	30AN : ANGLE OF ATTACK INDICATOR	30AN
3430-00-11	BeechJet / Hawker 400XP	3430-00-11 : SOLENOID VALVE	3430-00-11
35060-1164	BeechJet / Hawker 400XP	35060-1164 : CABIN R O C INDICATOR	35060-1164
38-771	BeechJet / Hawker 400XP	38-771 : BRAKE VALVE	38-771
39259	BeechJet / Hawker 400XP	39259 : FUEL CAP	39259 OR 457-542
400-8002-97	BeechJet / Hawker 400XP	400-8002-97 : BRAKE ASSEMBLY	400-8002-97
42-901	BeechJet / Hawker 400XP	42-901 : CONTROL BOX	42-901
438-001	BeechJet / Hawker 400XP	438-001 : AMPLIFIER	438-001
45100-41	BeechJet / Hawker 400XP	45100-41 : SHIMMY DAMPER ASSEMBLY, NLG	45100-41
457-542	BeechJet / Hawker 400XP	457-542 : FUEL CAP ASSEMBLY	457-542 or 39259
45A35022-601	BeechJet / Hawker 400XP	45A35022-601 : INLET DUCT ASSEMBLY	45A35022-601
45A35022-602	BeechJet / Hawker 400XP	45A35022-602 : INLET DUCT ASSEMBLY	45A35022-602
45AS38101-005	BeechJet / Hawker 400XP	45AS38101-005 : MAIN LDG 46001-21	45AS38101-005
45AS38202-017	BeechJet / Hawker 400XP	45AS38202-017 : BRAKE ASSEM (5004190-6)	5004190-6 or 45AS38202-017
45AS38401-011	BeechJet / Hawker 400XP	45AS38401-011 : MASTER BRAKE CYLINDER	45AS38401-011
45AS38401-012	BeechJet / Hawker 400XP	45AS38401-012 : MASTER BRAKE CYLINDER	45AS38401-012
45AS38515-007	BeechJet / Hawker 400XP	45AS38515-007 : CYLINDER	45AS38515-001 or 45AS38515-007
45AS38515-008	BeechJet / Hawker 400XP	45AS38515-008 : CYLINDER	45AS38515-008
45AS48002-5	BeechJet / Hawker 400XP	45AS48002-5 : VALVE, FUEL *RA	45AS48002-003 OR 45AS48002-5
45AS48015-002	BeechJet / Hawker 400XP	45AS48015-002 : ELECTRIC FUEL PUMP*RA	45AS48015-002
45AS61014-107	BeechJet / Hawker 400XP	45AS61014-107 : ACTUATOR LEFT ROLL TRIM	45AS61014-102 (may include upgrade charges) 45AS61014-107
45AS61014-108	BeechJet / Hawker 400XP	45AS61014-108 : ACTUATOR RIGHT ROLL TRIM	45AS61014-101 (may include upgrade charges) 45AS61014-108
45AS61014-111	BeechJet / Hawker 400XP	45AS61014-111 : ACTUATOR RUDDER TRIM	45AS61014-003 & 45AS61014-005 (may include upgrade charges) 45AS61014-111

45AS61015-023	BeechJet / Hawker 400XP	45AS61015-023 : SWITCH UNIT	45AS61015-019 ( include upgrade charges of \$360.00) 45AS61015-023
45AS61015-025	BeechJet / Hawker 400XP	45AS61015-025 : SWITCH UNIT	45AS61015-021 (may include upgrade charges) 45AS61015-025
45AS61021-010	BeechJet / Hawker 400XP	45AS61021-010 : CYL FLAP	45AS61021-010
45AS61023-009	BeechJet / Hawker 400XP	45AS61023-009 : ACTUATOR	45AS61023-003, 45AS61023-005, 45AS61023-007, 45AS61023-009
45AS61023-143	BeechJet / Hawker 400XP	45AS61023-143 : ACTUATOR	45AS61023-105,-133,-135,-131,-137 and -139 (may include upgrade charges) 45AS61023-143
45AS63001-025	BeechJet / Hawker 400XP	45AS63001-025 : OUTFLOW VALVE	45AS63001-025
45AS63019-009	BeechJet / Hawker 400XP	45AS63019-009 : PRESSURE REGULATOR VALVE	45AS63019-009
45AS65020-001	BeechJet / Hawker 400XP	45AS65020-001 : HYDRAULIC PUMP	45AS65020-001
45AS66001-011	BeechJet / Hawker 400XP	45AS66001-011 : PRESSURE REGULATOR VALVE	45AS66001-009 (may include upgrade charges) 45AS66001-011
45AS66008-005	BeechJet / Hawker 400XP	45AS66008-005 : PRESSURE REGULATOR VALVE	45AS66008-005
45AS80004-005	BeechJet / Hawker 400XP	45AS80004-005 : YAW DAMPER	45AS80004-005
45AS80004-007	BeechJet / Hawker 400XP	45AS80004-007 : COMPUTER - YAW DAM	45AS80004-007
45AS86114-001	BeechJet / Hawker 400XP	45AS86114-001 : AIR SPEED INDICATO	45AS86114-001
45AS86801-007	BeechJet / Hawker 400XP	45AS86801-007 : FUEL FLOW SIGNAL CON	45AS86801-007
45AS86801-009	BeechJet / Hawker 400XP	45AS86801-009 : FUEL FLOW INDICATOR DII	45AS86801-009
45AS86803-007	BeechJet / Hawker 400XP	45AS86803-007 : VIBRATION METER	45AS86803-007
45AS86805-017	BeechJet / Hawker 400XP	45AS86805-017 : FLAP POSITION ASYMMETRY DETECTOR	45AS86805-017
45AS86805-019	BeechJet / Hawker 400XP	45AS86805-019 : POSITION TRANSMITTER	45AS86805-007 (may include upgrade charges) 45AS86805-019
45AS86805-033	BeechJet / Hawker 400XP	45AS86805-033 : POSITION TRANSMITTER	45AS86805-033
45AS86807-019	BeechJet / Hawker 400XP	45AS86807-019 : ADA INDICATOR	45AS86807-019
45AS86807-021	BeechJet / Hawker 400XP	45AS86807-021 : STALL WARNING COMPUTER	45AS86807-017 or 45AS86807-021
45AS86808-017	BeechJet / Hawker 400XP	45AS86808-017 : STABILIZR TRIM IND TT1-UP,TX1-UP,RK71-UP	45AS86808-017
45AS86822-003	BeechJet / Hawker 400XP	45AS86822-003 : ITT INDICATOR	45AS86822-003
45AS86822-005	BeechJet / Hawker 400XP	45AS86822-005 : ITT INDICATOR	45AS86822-005
45AS86825-009	BeechJet / Hawker 400XP	45AS86825-009 : OIL TEMP INDICATOR	45AS86825-009
45AS86832-003	BeechJet / Hawker 400XP	45AS86832-003 : CABIN INDICATOR	45AS86832-003
45AS86846-009	BeechJet / Hawker 400XP	45AS86846-009 : HYDRAULIC PRESSURE INDICATOR	45AS86846-009
45AS86848-001	BeechJet / Hawker 400XP	45AS86848-001 : ROLL TRIM INDICATOR	45AS86848-001
45AS88801-009	BeechJet / Hawker 400XP	45AS88801-009 : GENERATOR CTRLUNIT	45AS88801-009
45AS88801-017	BeechJet / Hawker 400XP	45AS88801-017 : DC STARTER GENERATOR	45AS88801-017
45AS88801-019	BeechJet / Hawker 400XP	45AS88801-019 : GENERATOR CONTROL PANEL	45AS88801-019
45AS88801-025	BeechJet / Hawker 400XP	45AS88801-025 : GENERATOR CONTROL UNIT	45AS88801-025
45AS88804-001	BeechJet / Hawker 400XP	45AS88804-001 : POWER SUPPLY	45AS88804-001 or 60-3157-1
45AS88830-007	BeechJet / Hawker 400XP	45AS88830-007 : ACTUATOR LDG LT RETRACTION	45AS88830-005 (may include upgrade charges) 45AS88830-007
45AS88856-005	BeechJet / Hawker 400XP	45AS88856-005 : CONTROL BOX	45AS88856-005
45AS88860-025	BeechJet / Hawker 400XP	45AS88860-025 : ANNUNCIATOR PANEL	45AS88860-025
477-23906	BeechJet / Hawker 400XP	477-23906 : CONTROL ASSEMBLY	477-23906
5/8-1-81-303	BeechJet / Hawker 400XP	5/8-1-81-303 : TURBINE FLOWMETER	5/8-1-81-303
500-0619-05	BeechJet / Hawker 400XP	500-0619-05 : COFFEE BREWER (1601B-DC28)	500-0619-05
5006450-5	BeechJet / Hawker 400XP	5006450-5 : NOSE WHEEL ASSEMBLY	5006450-5
501-1228-04	BeechJet / Hawker 400XP	501-1228-04 : EMERGENCY BATTERY(PS-835D)*RA	501-1228-04
501-1228-06	BeechJet / Hawker 400XP	501-1228-06 : EMERG PWR SUPPLY*RA	501-1228-06
501-1412-03	BeechJet / Hawker 400XP	501-1412-03 : GYRO-HORIZON	501-1412-03
50284-003	BeechJet / Hawker 400XP	50284-003 : BATTERY FAULT UNIT	50284-003
586110-9	BeechJet / Hawker 400XP	586110-9 : COOLING TURBINE	586110-3 (may include upgrade charges) 586110-9
603	BeechJet / Hawker 400XP	603 : TONE GENERATOR	603
68620	BeechJet / Hawker 400XP	68620 : ACTUATOR T/R	68620
720-303	BeechJet / Hawker 400XP	720-303 : INDICATOR, RUDDER TRIM	720-303
76621-4	BeechJet / Hawker 400XP	76621-4 : PITCH TRIM CONTROLLER	76621-2 or 76621-4

80037-105V	BeechJet / Hawker 400XP	80037-105V : PREPCO JUG	80037-105V
866-1-1	BeechJet / Hawker 400XP	866-1-1 : LAMP DIMMER	866-1-1
87-5106-2	BeechJet / Hawker 400XP	87-5106-2 : POWER SUPPLY LEAD ACID*RA	87-5106-2
878208-0875-1	BeechJet / Hawker 400XP	878208-0875-1 : AIR CONTROL	878208-0875-1
90033-25	BeechJet / Hawker 400XP	90033-25 : ANTI-COLLISION LIGHT ASSY	90033-25
979494-1	BeechJet / Hawker 400XP	979494-1 : SHUTOFF VALVE	979494-1
AC201	BeechJet / Hawker 400XP	AC201 : TOTALIZER DRIVER	AC201
AVMC2010-200	BeechJet / Hawker 400XP	AVMC2010-200 : AUDIO/VIDEO CONTROLLER	AVMC2010-200
AVMC-2010-400	BeechJet / Hawker 400XP	AVMC-2010-400 : AUDIO CONTROLLER	AVMC-2010-400
MC10-15-18	BeechJet / Hawker 400XP	MC10-15-18 : OXYGEN MASK	MC10-15-18
PC450-4A	BeechJet / Hawker 400XP	PC450-4A : INVERTER	PC450-4A
PC900-3A2000PH1-1	BeechJet / Hawker 400XP	PC900-3A2000PH1-1 : INDICATOR/CONDITIONER UNIT	PC900-3A2000PH1-1
SPC5(B)	BeechJet / Hawker 400XP	SPC5(B) : STATIC INVERTER	SPC5(B)
SPS3-2-1135	BeechJet / Hawker 400XP	SPS3-2-1135 : SWITCH	SPS3-2-1135
1/2-2-81-301	Common	1/2-2-81-301 : TURBINE FLOWMETER	1/2-2-81-301
101-364712-1	Common	101-364712-1 : MODULE ASSEM N1 SP & ICE VANE	101-364712-1
101-384207-13	Common	101-384207-13 : OXYGEN CYLINDER ASSEMBLY 77 CU FT*RA	101-384207-13
101-388009-5	Common	101-388009-5 : ACCUMULATOR *RA-N	101-388009-3 (may include upgrade charges) 101-388009-5
102466-5	Common	102466-5 : PRESSURE REGULATOR	102466-5
103570-27	Common	103570-27 : OUTFLOW VALVE	103570-27
10-381550-22	Common	10-381550-22 : EXCITER, DUAL*RA	10-381550-22
10-381550-4	Common	10-381550-4 : EXCITER	10-381550-4
109-361016-5	Common	109-361016-5 : PC BOARD OVR VOLT & ADVISORY LIGHT	109-361016-5
109-524329-9	Common	109-524329-9 : ACTUATOR-ELECT.TRIM TAB	109-524329-9
109812-9	Common	109812-9 : SHUT-OFF VALVE	109812-9
1134104-1	Common	1134104-1 : DC MOTOR ASSEMBLY	1134104-1
114-364086-1	Common	114-364086-1 : MODULE ASSY - ANN LEGEND POWER SUPPLY	114-364086-1
114-380015-1	Common	114-380015-1 : SYNCHROSCOPE INDICATOR, ENG/PROP	114-380015-1
114-380018-1	Common	114-380018-1 : CABIN CLIMB INDICATOR	114-380018-1
114-389039-9	Common	114-389039-9 : ACTUATOR ASSEMBLY	114-389039-9
122-382142-11	Common	122-382142-11 : STANDBY ALT	122-382142-11
122-382142-9	Common	122-382142-9 : ALTIMETER-STANDBY 2	122-382142-9
128-380067-11	Common	128-380067-11 : CREW OXYGEN MASK ASSY	128-380067-11
128-820028-5	Common	128-820028-5 : SHOCK STRUT ASSEMBLY-OUTER, NOSE	128-820028-5
129-364066-5	Common	129-364066-5 : PC BOARD ASSEM, BUS TIE CONTROL	129-364066-5
129-521050-6001	Common	129-521050-6001 : ACTUATOR ASSEMBLY, INBOARD FLAP	129-521050-6001
129-521050-6002	Common	129-521050-6002 : ACTUATOR ASSEMBLY-FLAP OUTBD	129-521050-6002
129-521051-6001	Common	129-521051-6001 : ACTUATOR ASSEMBLY FLAP OUTBD	129-521051-6001
130156-2	Common	130156-2 : CHECK VALVE	130156-2
130346-11	Common	130346-11 : CABIN PRESSURIZATION CONTROLLER	130346-11
132322-3	Common	132322-3 : FAN AND VENTURI TUBE OUTLINE	132322-3 OR 132322-3-1
161043-701	Common	161043-701 : ELECTRONIC SEQUENCE UNIT	161043-701
172010-03	Common	172010-03 : REGULATOR OXYGEN PRESSURE	172010-03
172400-14	Common	172400-14 : OXYGEN REGULATOR	172400-14
174252-92	Common	174252-92 : CREW MASK, SWEEP-ON 2000, BEECH, ELECTRE	174252-92 or 128-380067-25
174260-23	Common	174260-23 : OXYGEN MASK	174260-23
176531-35	Common	176531-35 : OXYGEN CYLINDER (1000 ML)*RA	176531-35
176960-7SM2A2430	Common	176960-7SM2A2430 : O2 BOTTLE W/O MASK*RA	176960-7SM2A2430
17E24-8	Common	17E24-8 : IGNITION UNIT	17E24-8
1D2-12	Common	1D2-12 : FUEL BOOST PUMP *RA	1D2-12
1U367-207-8	Common	1U367-207-8 : HORIZON GYRO INDICATOR	1U367-207-8
200-1016-1	Common	200-1016-1 : HOT TANK	200-1016-1
20051	Common	20051 : INVERTER 120VA	20051
202-0002-508	Common	202-0002-508 : DOOR ASSEM RH	202-0002-508
2100-1020-00	Common	2100-1020-00 : COCKPIT VOICE RECORDER (2 HOUR)	2100-1020-00
210638	Common	210638 : GOVERNOR	210638

24929-412	Common	24929-412 : ENCODING ALTIMETER	24929-412
27101-01-01	Common	27101-01-01 : AIR DATA UNIT	27101-01-01
27441482	Common	27441482 : VALVE	27441482 or 27441482-09
30-0531-1	Common	30-0531-1 : WING LIGHT	30-0531-1
3012-24	Common	3012-24 : TIMER VALVE ASSEMBLY	3012-24
30-1329-1	Common	30-1329-1 : LIGHT ASSEMBLY, NAVIGATIONAL	30-1329-1
30-1329-5M	Common	30-1329-5M : STROBE RED W/P&R	30-1329-5M
30-1329-6M	Common	30-1329-6M : LIGHT ASSEMBLY	30-1329-6M
30-1617-4	Common	30-1617-4 : LIGHT ASSEMBLY	30-1617-4
3033057	Common	3033057 : ANTI ICE VALVE	3033057
3041640-01	Common	3041640-01 : IGNITION EXCITER	3041640-01
3073776-1	Common	3073776-1 : IGNITOR BOX	3073776-1
3100829-03	Common	3100829-03 : VALVE	3100829-03
3215086-3	Common	3215086-3 : VALVE	3215086-3
3515000-107	Common	3515000-107 : FLOAT SWITCH	3515000-107
3515000-149	Common	3515000-149 : FLOAT SWITCH	3515000-149
3515000-76	Common	3515000-76 : SWITCH, FLOAT	3515000-76
36-380027-37	Common	36-380027-37 : EVAPORATOR MODULE ASSY	36-380027-37
36-380088-1	Common	36-380088-1 : EVAPORATOR MODULE	36-380088-1
3701-14	Common	3701-14 : LIFT TRANSDUCER	3701-14
3E1964-3	Common	3E1964-3 : TIMER	3E1964-3
40-0127-1	Common	40-0127-1 : BEACON, ROTATING (RED LENS)	40-0127-1
400-1794-04	Common	400-1794-04 : COFFEE BREWER, TIA AIR COFFEE	400-1794-04
4140-00-39NV	Common	4140-00-39NV : PUMP BOOST	4140-00-39NV
453-0150	Common	453-0150 : TRANSMITTER, ELT110-4(BEECH)*RA-N	453-0150
453-5000-366	Common	453-5000-366 : 406 MHZ ELT - UNITED STATES *RA	453-5000-366
453-5000-999	Common	453-5000-999 : 406 MHZ ELT - NO COUNTRY*RA	453-5000-999
453-6500	Common	453-6500 : ELT/NAV INTERFACE UNIT	453-6500
477-90005	Common	477-90005 : CONTROL FIRE DETECTOR	477-90005
500-31A1	Common	500-31A1 : AFT TOILET	500-31A1
501-1826-01	Common	501-1826-01 : MAGNETOMETER (MAG-3000A)	501-1826-01
50-810164-17	Common	50-810164-17 : ACTUATOR ASSEM MAI	50-810164-17
50-810164-18	Common	50-810164-18 : ACTUATOR ASSEM MAI	50-810164-18
50-820208-5	Common	50-820208-5 : ACTUATOR ASSEMBLY-NOS	50-820208-5
5412600-3	Common	5412600-3 : THRUST REVERSER CONTROL PANEL	5412600-3
5453512-19	Common	5453512-19 : ACTUATOR ASSY	5453512-19
5453512-20	Common	5453512-20 : ACTUATOR ASSY	5453512-20 or 5453512-18
559-1	Common	559-1 : TRANSMITTER	559-1
571302	Common	571302 : MOTOR HYD PWR PACK	571302
60-3146-3	Common	60-3146-3 : POWER UNIT	60-3146-3
630-007	Common	630-007 : AURAL WARNING AMPLIFIER	630-007
6900057-000	Common	6900057-000 : POWER SUPPLY, COLD CATHODE	6900057-000
692545-17	Common	692545-17 : FUEL SOLONID	692545-17
725729-815BK	Common	725729-815BK : MACH1 HANDSET W/ MOUNT (BLACK)	725729-815BK
7511001-909	Common	7511001-909 : AV-850A	7511001-909
7913003K	Common	7913003K : SINGLE POINT REFUEL VALVE	7913003K
795-9	Common	795-9 : TRANSDUCER	795-9
80037-123V	Common	80037-123V : COFFEE UNIT	80037-123V
801292-01	Common	801292-01 : OXYGEN REGULATOR	801292-01
803-005	Common	803-005 : AUDIO SELECT PANEL	803-003 or 803-005
8210-007	Common	8210-007 : GOVERNOR	8210-007
8210-310	Common	8210-310 : GOVERNOR	8210-310
90-380009-2	Common	90-380009-2 : FUEL FLOW INDICATOR	90-380009-2
90-380009-5	Common	90-380009-5 : FUEL FLOW INDICATOR	90-380009-5
90-380009-7	Common	90-380009-7 : FUEL FLOW TRANSMITTER	90-380009-7
90-380033-3	Common	90-380033-3 : INDICATOR-ITT	90-380033-3
90-380034-3	Common	90-380034-3 : INDICATOR-TORQUE	90-380034-3

90-380035-5	Common	90-380035-5 : INDICATOR-PROP TACH	90-380035-5
90-380036-3	Common	90-380036-3 : INDICATOR - OIL TEMP & PRESS	90-380036-3
90-384028-5	Common	90-384028-5 : TACHOMETER	90-384028-5
9133-25-B1	Common	9133-25-B1 : FLOWMETER TRANSMITTER	9133-25-B1
91-380012-3	Common	91-380012-3 : TORQUE INDICATOR	91-380012-3
93-A151-30	Common	93-A151-30 : VOICE RECORDER CONTROL	93-A151-30
978944-1-1	Common	978944-1-1 : SHUT OFF VALVE	978944-1-1
979494-4	Common	979494-4 : SHUTOFF VALVE	979494-4
99-388007-1	Common	99-388007-1 : LIQUID LEVEL SENSOR	99-388007-1
A213796	Common	A213796 : SYNCHROPHASER CONTROL BOX	A213796
A24A9238	Common	A24A9238 : MOTOR	A24A9238
B01A214128A	Common	B01A214128A : INSTALLATION SHUT OFF VALVE	B01A214128A OR MAP900-001
B210631	Common	B210631 : GOVERNOR	B210631
C46B15000-23	Common	C46B15000-23 : COWL DOOR RH	C46B15000-23
DK120	Common	DK120 : UNDERWATER BEACON	DK120
G7740A19-24	Common	G7740A19-24 : BEACON LIGHT	G7740A19-24
HE780-5	Common	HE780-5 : SELECTOR VALVE	HE780-5
HE780-7	Common	HE780-7 : VALVE FUEL SELECTR	HE780-7
HTE1984-1	Common	HTE1984-1 : VALVE, FUEL	HTE1984-1
HYLZ50336-1	Common	HYLZ50336-1 : CABIN CONTROL TEMP	HYLZ50336-1
M71050-1	Common	M71050-1 : MOTOR ASSEMBLY	M71050-1
MC10-14-123	Common	MC10-14-123 : CREW OXYGEN MASK	MC10-14-103 OR MC10-14-123
MC815AS1	Common	MC815AS1 : CONTROLLER	MC815AS1
MODEL 240	Common	MODEL 240 : PAGING/STEREO AMPLIFIER	MODEL 240
MODEL 700-007	Common	MODEL 700-007 : DIGITAL AUDIO AMPLIFIER	MODEL 700-007, Model 700-005 is an acceptable core but there will be an additional \$350.00 charge to upgrade.
MODEL 803-003	Common	MODEL 803-003 : AUDIO SELECTOR PANEL	MODEL 803-003
MS28061T7	Common	MS28061T7 : PRESSURE GUAGE	MS28061T7
PC250	Common	PC250 : STATIC INVERTER 250 VA	PC250
PC900-1A0800PH1-2	Common	PC900-1A0800PH1-2 : FUEL FLOW INDICATOR	PC900-1A0800PH1-2
PM24-1	Common	PM24-1 : MOTOR LDG	PM24-1
S100-0080-00	Common	S100-0080-00 : COCKPIT VOICE RECORDER	S100-0080-00
SLZ8060-4	Common	SLZ8060-4 : ANGLE OF ATTACK TRANSMITTER	SLZ8060-3 (may include upgrade charges) SLZ8060-4
SM50D7	Common	SM50D7 : BRAKE RELAY	SM50D7
SP586	Common	SP586 : PASSENGER CONTROL DEVICE	SP586
SPC38	Common	SPC38 : INVERTER 375VA	SPC38
SPS-1607A	Common	SPS-1607A : INVERTER	SPS-1607A
SS50	Common	SS50 : STATIC INVERTER	SS50
01-0790044-54	Hawker	01-0790044-54 : ANTI-COLLISION BEACON	01-0790044-54
0107KPU1	Hawker	0107KPU1 : PROCESSOR	0107KPU1
011099	Hawker	011099 : FAN-ROTRON (KIT W/PWR SUPPLY)	AIR87236-0
0201KAM3	Hawker	0201KAM3 : AMPLIFIER	0201KAM3
0222KSB2	Hawker	0222KSB2 : STALL DETECTOR	0222KSB2
0223KSB1	Hawker	0223KSB1 : DETECTOR, STALL	0223KSB1
064-1015-01	Hawker	064-1015-01 : HF KTR953 RECEIVER	064-1015-01
064-1017-02	Hawker	064-1017-02 : H.F. POWER KAC952	064-1017-02
064135141-3	Hawker	064135141-3 : VALVE	064135141-3
0901-2	Hawker	0901-2 : BLOWER	0901-2 or 2100901-2
100-0540-04	Hawker	100-0540-04 : BATTERY,EMERGENCY,LEAD-ACID,SEALED*RA	100-0540-04
140-380010-3	Hawker	INVERTER - 1500VA	100-1600-01 or 140-380010-1
10116	Hawker	10116 : SWITCH	10116
10201-1	Hawker	10201-1 : STALL DETECTOR	10201-1
102466-13	Hawker	102466-13 : REGULATOR OUTLINE,ABSOLUTE AIR PRESSURE	102466-13 102466-5 (may include upgrade charges)
102466-15	Hawker	102466-15 : REGULATOR OUTLINE,ABSOLUTE AIR PRESSURE	102466-15 102466-1 (may include upgrade charges)

10280	Hawker	10280 : STALL DETECTOR	10280
102ER1EC	Hawker	102ER1EC : TOTAL TEMP SENSOR(TRIPLE EL	102ER1EC
103278-13	Hawker	103278-13 : OUTFLOW SAFETY VALVE	103278-13
103278-18	Hawker	103278-18 : SAFETY VALVE	103278-18
104568	Hawker	104568 : VALVE MODULATOR	104568
104568-10	Hawker	104568-10 : VAVLE, AUXILARY HE	104568-10
104829001	Hawker	104829001 : PUSHER	104829001
104968	Hawker	104968 : VALVE	104968
106884-3-1	Hawker	106884-3-1 : FLOW CONTROL VALVE	106884-3-1
107312-4-1	Hawker	107312-4-1 : RELAY PNEUMATIC	107312-4-1
1092TH100-47	Hawker	1092TH100-47 : ACTUATOR	1092TH100-47
1150642-2	Hawker	1150642-2 : SENSOR	1150642-2
1150642-3	Hawker	1150642-3 : SENSOR	1150642-3
1159000-1	Hawker	1159000-1 : VALVE, PRESSURE RE	1159000-1
1202-009	Hawker	1202-009 : ORDINANCE SIGN	1202-009
124-25A	Hawker	124-25A : VALVE	124-25A
130530-5	Hawker	130530-5 : CONTROLLER OUTLINE, OUTFLOW VALVE	130530-4 (may include upgrade charges) 130530-5
132322-3-1	Hawker	132322-3-1 : FAN VENTURI	132322-3 OR 132322-3-1
140-380010-1	Hawker	140-380010-1 : STATIC INVERTER	140-380010-1 or 100-1600-01
140-380020-0001	Hawker	CONTACTOR - INVERTER	140-380020-0001
140-380026-1	Hawker	140-380026-1 : STARTER/GENERATOR - 400 AMP, 30 VOLT	140-380026-1 OR 23080-064
1500-00-65	Hawker	1500-00-65 : FUEL PUMP	1500-00-65
15900-916	Hawker	15900-916 : INDICATOR	15900-916
1611AM3	Hawker	1611AM3 : STANDBY ALTIMETER	1611AM3
1703-12	Hawker	1703-12 : VANE UNIT	1703-12
19004-00-01	Hawker	19004-00-01 : MAGNETOMETER	19004-00-01
203880-3-1	Hawker	203880-3-1 : TURBINE, COOLING	203880-3-1 203880-2-2 (may include upgrade charges)
2070C11	Hawker	2070C11 : FUEL BOOST PUMP	2070C11 or 2C40-2
2100901-2	Hawker	2100901-2 : BLOWER	0901-2 or 2100901-2
2118756-1	Hawker	2118756-1 : SYNC/APR	2118756-1
2121-01-0014	Hawker	2121-01-0014 : OIL/PRESS/IND	2121-01-0014
2121-1-13	Hawker	2121-1-13 : OIL TEMP IND	2121-1-13
2132-1-11	Hawker	2132-1-11 : FLAP POSITION	2132-1-11
2132-1-13	Hawker	2132-1-13 : AMMETER, DC	2132-1-13
2132-1-15	Hawker	2132-1-15 : INDICATOR, CABIN T	2132-1-15
2132-1-48	Hawker	2132-1-48 : AMMETER, DC	2132-1-48
2141-1-14	Hawker	2141-1-14 : INDICATOR	2141-1-14
2168H000	Hawker	2168H000 : VALVE, PRESSURE	2168H000
2205490-3	Hawker	2205490-3 : TURBINE ASSEMBLY	2205490-1 (may include upgrade charges) 2205490-3
23080-005	Hawker	23080-005 : STARTER GENERATOR	23080-005
23091-002	Hawker	23091-002 : STARTER GENERATER	23091-002
251-500-000-202	Hawker	251-500-000-202 : ENGINE INDICATOR	251-500-000-202
25-8CT29-115A	Hawker	25-8CT29-115A : JACK-ELEV.TRIM LH	25-8CT29-115A
25-8CT29-116A	Hawker	25-8CT29-116A : JACK - ELEV. TRIM RH	25-8CT29-116A
25-8CW159AB	Hawker	25-8CW159AB : LH FLAP SCREW JACK	25-8CW159AB
25-8CW159AC	Hawker	25-8CW159AC : SCREW JACK	25-8CW159AC
25-8CW161AB	Hawker	25-8CW161AB : RH FLAP SCREWJACK	25-8CW161AB
25-8CW161AC	Hawker	25-8CW161AC : SCREW JACK	25-8CW161AC
25-8FN353-43A	Hawker	25-8FN353-43A : PANEL, WINDSCREEN-SEE0025-0013418-9	25-8FN353-43A
25-8WS1513-53	Hawker	25-8WS1513-53 : LH TKS WING PANEL	25-8WS1513-53
25-8WS1513-54	Hawker	25-8WS1513-54 : TKS PANEL	25-8WS1513-54
25-8WS1513-55	Hawker	25-8WS1513-55 : LH TKS WNG PANEL	25-8WS1513-55 or 25-8WS1513-25
25-8WS1513-57	Hawker	25-8WS1513-57 : LH TKS WING PANEL	25-8WS1513-57
25-8WS1513-59	Hawker	25-8WS1513-59 : LH TKS WNG PANEL	25-8WS1513-59

25-8WS1513-69A	Hawker	25-8WS1513-69A : TKS WING LH	25-8WS1513-69A
25-8WS1513-72A	Hawker	25-8WS1513-72A : TKS WING RH	25-8WS1513-72A
25-9NF2323-5A	Hawker	25-9NF2323-5A : T.L.P.U.ASSY.	25-9NF2323-5A
25-9WG5-43A	Hawker	25-9WG5-43A : TRIM TAB ASSEMBLY	25-9WG5-43A
25CF2391AC	Hawker	25CF2391AC : STRUT	25CF2391AC
25CF2667AD	Hawker	25CF2667AD : LH BEVEL SHAFT	25CF2667AD
25FC6829AF	Hawker	25FC6829AF : MOTOR, TENSATOR	25FC6829AF
25FC7881-41A	Hawker	25FC7881-41A : CAB. WINDOW	25FC7881-41A
25FC7881-53A	Hawker	25FC7881-53A : PANEL CABIN WINDOW	25FC7881-53A
266D0065-507	Hawker	266D0065-507 : T/R CONTROL ROHR	266D0065-507
266D0066-505	Hawker	266D0066-505 : ACTUATOR	266D0066-505
27005-00-10	Hawker	27005-00-10 : AIR DATA UNIT	27005-00-10
28704D4001	Hawker	28704D4001 : ENCODING ALTIMETER	28704D4001
2B6-72	Hawker	2B6-72 : FUEL PUMP	2B6-72
2C40-2	Hawker	2C40-2 : CENTRALFUGAL FUEL BOOST PUMP	2C40-2
3001KID01	Hawker	3001KID01 : VENTRAL TANK FUEL	AIR48542-1
30-1198-3C	Hawker	30-1198-3C : BEACON, STROBE	30-1198-3C
30402104-2	Hawker	30402104-2 : FIRE EXT,W/O SQ*RA	30402104-2
3070850-57	Hawker	3070850-57 : FUEL PUMP	3070850-57
3073914-4	Hawker	3073914-4 : UNIT, IGNITION 800	3073914-4
321292-1	Hawker	321292-1 : SHUT-OFF VALVE	321292-1
3213788-1-1	Hawker	3213788-1-1 : BLEED AIR MIXER VALVE	3213788-1-1
3215224-2	Hawker	3215224-2 : VALVE	3215224-2 OR 3215224-1
321776-1-1	Hawker	321776-1-1 : VALVE BY-PASS	321776-1-1
33200002-3	Hawker	33200002-3 : FIRE EXT BOTTLE *RA*	33200002-3 or 33200002
33200006-3	Hawker	33200006-3 : FIRE BOTTLE(W/O SQ)*RA	33200006-3 or 33200006
33200009-3	Hawker	33200009-3 : FIRE EXTINGUISHER BOTTLE *RA*	33200009-3 or 33200009
33508-10-03	Hawker	33508-10-03 : SECONDARY FLIGHT DISPLAY	33508-10-03
3515000-103	Hawker	3515000-103 : SWITCH, FLOAT	3515000-103
3515000-105	Hawker	3515000-105 : L/R TANK SWITCH	3515000-105
3515000-106	Hawker	3515000-106 : SWITCH	3515000-106
3515000-171	Hawker	3515000-171 : VENTRAL LEVEL SWIT	3515000-171
39205-00-01	Hawker	39205-00-01 : SECONDARY FLIGHT DISPLAY - MARK II	39205-00-01
39213-00-01	Hawker	39213-00-01 : SECONDARY FLIGHT DISPLAY MARK 2	39213-00-01
400-0125-2000	Hawker	400-0125-2000 : TRANSCEIVER RT-18D	400-0125-2000
4016341-905	Hawker	4016341-905 : ALTIMETER GREY	4016341-905
4190-01	Hawker	4190-01 : FIRE EXT. (CARTRIDGE NOT INCLUDED) *RA*	4190-01
42022-03	Hawker	42022-03 : PUMP, HYDRAULIC	42022-03
4503159	Hawker	4503159 : FUEL NOZZLE	4503159
45C3-111	Hawker	45C3-111 : FAN	45C3-111
501-1235-01	Hawker	501-1235-01 : INVERTER	501-1235-01
501-1296-04	Hawker	501-1296-04 : GYRO(SEE AI804AF)	501-1296-04
501-1656-02	Hawker	501-1656-02 : ADI332 ATTITUDE DIRECTION INDICATOR	501-1656-02
506-1-00488	Hawker	506-1-00488 : CONTROLLER	506-1-00488
51010-1113	Hawker	51010-1113 : TRIPLE INDICATOR	51010-1113
51509-006C	Hawker	51509-006C : REGULATOR,VOLTAGE	51509-006C
51539-006H	Hawker	51539-006H : GENERATOR CONTROL UNIT	51539-006H
5400505-1	Hawker	5400505-1 : CONTROL VALVE	5400505-1
5400612-1	Hawker	5400612-1 : RELAY BOX ASSEMBLY, THRUST REVERSER	5400612-1
5453303-3	Hawker	5453303-3 : RETARD ACTUATOR	5453303-3
5453511-11	Hawker	5453511-11 : FAN FLAP ACTUATOR	5453511-11
5453512-17	Hawker	5453512-17 : ACTUATOR	5453512-17
5453521-7	Hawker	5453521-7 : LATCH ACTUATOR	5453521-7
60-1321-1	Hawker	60-1321-1 : BATTERY *RA-N	60-1321-1
60-1755-1	Hawker	60-1755-1 : POWER SUPPLY UNITS	60-1755-1
60-2667-5	Hawker	60-2667-5 : POWER SUPPLY	60-2667-5
614MK2	Hawker	614MK2 : F.C.U.	614MK2

617452-3	Hawker	617452-3 : CONTROLLER	617452-3
617452-4	Hawker	617452-4 : CONTROL, TEMPERATURE	617452-4
617MK4	Hawker	617MK4 : FLAP POSITION	617MK4
630-003	Hawker	630-003 : AURAL WARNING GENERATOR	630-003
63604-210-2	Hawker	63604-210-2 : INDICATOR, ITT	63604-210-2
63604-410-3	Hawker	63604-410-3 : INDICATOR, N1 RPM	63604-410-3
64251-200-1	Hawker	64251-200-1 : TRANSMITTER	64251-200-1
65WE01030-3-6	Hawker	65WE01030-3-6 : PUMP, HYDRAULIC	65WE01030-3-6
696-1-13	Hawker	696-1-13 : BRAKE PRESSURE INDICATOR	696-1-13
7010133	Hawker	7010133 : DETECTOR (FX600)	7010133
701571	Hawker	701571 : POWER SUPPLY	701571
70989-2	Hawker	70989-2 : ACTUATOR, T/R	266D0066-505 OR 70989-2
70991-3	Hawker	70991-3 : HYDRAULIC CONTROL	70991-3
724855-801	Hawker	724855-801 : ARTU(AIR RADIO TELECOMMUNICATION KIT)	724855-801
7907015E	Hawker	7907015E : VALVE	7907015E
80037-110V	Hawker	80037-110V : COFFEE JUG, W/O SPIGOT	80037-110V
801292-03	Hawker	801292-03 : REGULATOR	801292-03
89799050	Hawker	89799050 : OXYGEN CYLINDER *RA	89799050
9-127-55	Hawker	9-127-55 : FUEL FLOW TRANSMITTER *RA-N	9-127-55
9168	Hawker	9168 : PUMP/BACKET	9168
920050	Hawker	920050 : AIRSHOW 400 DIU	920050
9201000-245	Hawker	9201000-245 : INDICATOR	9201000-245
9-328-26	Hawker	9-328-26 : INDICATOR - FUEL	9-328-26
9-464-76	Hawker	9-464-76 : FUEL FLOW IND.(LBS	9-464-76
978836-5-1	Hawker	978836-5-1 : VALVE	978836-5-1
A703FSS	Hawker	A703FSS : CONTACTOR	A703FSS
A703ZS	Hawker	A703ZS : CONTACTOR	A703ZS
A848MAS	Hawker	A848MAS : CONTACTOR	A848MAS
AC61480	Hawker	AC61480 : OUTLINE ARRANGEMENT-AXLE MOUNTED MAXARET	AC61480
AC61516	Hawker	AC61516 : VALVE	AC61516
AC61518	Hawker	AC61518 : VALVE	AC61518
AC65216	Hawker	AC65216 : MAXARET	AC65216
AC65218	Hawker	AC65218 : MAXARET	AC65218
AC67214	Hawker	AC67214 : RUDDER BIAS STRUT	AC67214
AC67732	Hawker	AC67732 : BRAKE CONTROL VALVE	AC67732
AC69536	Hawker	AC69536 : PRESSURE RELEASE VALVE	AC69536
AC69784	Hawker	AC69784 : EMERG BRAKE VALVE	AC69784
ACA1218	Hawker	ACA1218 : STRUT	ACA1218
ACM22740	Hawker	ACM22740 : BRAKE MODULATOR	ACM22740
ACM22742	Hawker	ACM22742 : MODULATOR, BRA	ACM22742
ACM26274	Hawker	ACM26274 : MASTER BRAKE CYLINDER	ACM26274
ACM30946	Hawker	ACM30946 : BRAKE MASTER CYLINDER	ACM30946
AH081963	Hawker	AH081963 : VALVE ASSEMBLY, SHUTTLE OUTER	AH081963
AH089964	Hawker	AH089964 : BRAKE HEATPACK 100	AH089964
AH52339	Hawker	AH52339 : NOSE WHEEL	AH52339
AH52787	Hawker	AH52787 : BRAKE ASSY.	AH52787
AHA1814	Hawker	AHA1814 : WHEEL	AHA1814
AHA1870	Hawker	AHA1870 : BRAKE	AHA1870
AHA1881	Hawker	AHA1881 : MAIN WHEEL 1000 SR	AHA1881
AHA1897	Hawker	AHA1897 : BRAKE UNIT	AHA1897
AH081964	Hawker	AH081964 : VALVE ASSEMBLY, SHUTTLE INNER	AH081964
AHO89443	Hawker	AHO89443 : HEAT PACK	AHO89443
AHO89443	Hawker	AHO89444 : HEAT PACK	AHO89443
AHO89881	Hawker	AHO89881 : BRAKE HEAT PACK - 800	AHO89881
AIR45394-0	Hawker	AIR45394-0 : VALVE	AIR45394-0
AIR45396-5	Hawker	AIR45396-5 : STEERING ACTUATOR	AIR45396-5 OR AIR45396-6

AIR45396-6	Hawker	AIR45396-6 : JACK - STEERING	AIR45396-5 (may include upgrade charges)
AIR45404-1	Hawker	AIR45404-1 : N/LEG JACK	AIR45396-6
AIR45406-1	Hawker	AIR45406-1 : VALVE	AIR45404-1
AIR45408-0	Hawker	AIR45408-0 : VALVE	AIR45406-1
AIR45420-0	Hawker	AIR45420-0 : VALVE (SERIALIZE PART)	AIR45408-0
AIR45446-2	Hawker	AIR45446-2 : VALVE	AIR45420-0
AIR45468-0	Hawker	AIR45468-0 : VALVE	AIR45446-2
AIR45474-0	Hawker	AIR45474-0 : PRESS. MAINT VALVE	AIR45468-0
AIR45574-3	Hawker	AIR45574-3 : ACCUMULATOR*RA-N	AIR45474-0
			AIR45574-3
AIR45574-4	Hawker	AIR45574-4 : ACCUMULATOR *RA-N	AIR45574-3 (may include upgrade charges)
AIR46520-1	Hawker	AIR46520-1 : JACK/AIRBRAKE LH	AIR45574-4
			AIR46520-1 OR AIR46520-2
AIR46520-2	Hawker	AIR46520-2 : AIRBRAKE SERVO	AIR46520-1 (may include upgrade charges)
AIR46521-1	Hawker	AIR46521-1 : AIR BRAKE ACTUATOR	AIR46520-2
			AIR46521-1 OR AIR46521-2
AIR46521-2	Hawker	AIR46521-2 : AIRBRAKE SERVO	AIR46521-1 (may include upgrade charges)
AIR48026-0	Hawker	AIR48026-0 : NON RETURN VALVE	AIR46521-2
			AIR48026-0
AIR48484-3	Hawker	AIR48484-3 : MAIN UNDER CARRIAGE DOOR JACK	AIR48484-1 (may include upgrade charges)
			AIR48484-3
AIR48485-3	Hawker	AIR48485-3 : MAIN UNDER CARRIAGE DOOR JACK	AIR48485-2 (may include upgrade charges)
			AIR48485-3
AIR48502-6	Hawker	AIR48502-6 : MAIN U/C JACK ASSY	-1s, -3s, -4s and -5s (may include upgrade charges)
			AIR48502-6
AIR48503-6	Hawker	AIR48503-6 : ACTUATOR - MAIN LANDING GEAR	-1s, -3s, -4s and -5s (may include upgrade charges)
AIR48540-1	Hawker	AIR48540-1 : VALVE/A.P. P/N - S	AIR48502-6
AIR48542-1	Hawker	AIR48542-1 : LH REVERSING VALVE	AIR48540-1
AIR48543-1	Hawker	AIR48543-1 : RH REVERSING VALVE	AIR48542-1
AIR87236-0	Hawker	AIR87236-0 : VALVE	AIR48543-1
AL-0581	Hawker	AL-0581 : INVERTER	AIR87236-0
ASH664-5	Hawker	ASH664-5 : INVERTER, STATIC (NOT TO BE SOLD AS NEW)	AL-0581
AV-9665-3	Hawker	AV-9665-3 : AUDIO/VIDEO CONTROL MODULE	ASH664-1 (may include upgrade charges) ASH664-5
AW2-17H	Hawker	AW2-17H : GAUGE	AV-9665-3
AWE124-51A	Hawker	AWE124-51A : NON RETURN VALVE	AIR48543-1
BA00501-1	Hawker	BA00501-1 : ALTERNATOR	AWE124-51A
BA02801-1	Hawker	BA02801-1 : ALTERNATOR	BA00501-1
BH185R280A	Hawker	BH185R280A : INDICATOR	BA02801-1
C82106-5	Hawker	C82106-5 : SIGNAL SUMMING UNIT	BH185R280A
C84706-3	Hawker	C84706-3 : SIGNAL UNIT	C82106-5
C87705-4	Hawker	C87705-4 : AOA COMPUTER	C84706-3
C87706-1	Hawker	C87706-1 : STALL SUMMING UNIT	C87705-4
C9500-11-15A	Hawker	C9500-11-15A : SWITCH -	C87706-1
CA-126	Hawker	CA-126 : BATTERY**RA	C9500-11-15A
CB005-01C	Hawker	CB005-01C : GENERATOR CONTROL	CA-126
CB02701	Hawker	CB02701 : CONTROLLER	CB005-01C
D3371-02	Hawker	D3371-02 : PANEL	CB02701
D3377-02	Hawker	D3377-02 : PANEL	D3371-02
DK100	Hawker	DK100 : CVR BECAN/BATTERY	D3377-02
DS259-3	Hawker	DS259-3 : ACCUMLTR,THRUST RV	DK100
E37040S	Hawker	E37040S : MONITOR	DS259-3
E42024-1	Hawker	E42024-1 : STATIC PLATE	E37040S
E42024-2	Hawker	E42024-2 : STATIC PLATE, HEATED	E42024-1
F10A5SCP102-5	Hawker	F10A5SCP102-5 : VALVE, ANTI-ICE	E42024-2
FRH070001	Hawker	FRH070001 : TKS LEVEL INDICATOR	F10A5SCP102-5
G5705	Hawker	G5705 : CHIME	FRH070001
			G5705

G9950-1	Hawker	G9950-1 : BEACON ASSEMBLY, UPPER	G9950-1
G9950-21	Hawker	G9950-21 : BEACON ASSY, LOWER, OSCILLATING	G9950-21
H220ABM	Hawker	H220ABM : INDICATOR	H220ABM
H330	Hawker	H330 : INDICATOR	H330
H330C	Hawker	H330C : INDICATOR	H330C
H341AGM1	Hawker	H341AGM1 : GYRO	H341AGM1
H901-254	Hawker	H901-254 : INDICATOR	H901-254
HTE250072	Hawker	HTE250072 : BLEED AIR VALVE	HTE250072
HTE250072-1	Hawker	HTE250072-1 : MAIN AIR VALVE	HTE250072-1
HTE250088	Hawker	HTE250088 : VALVE, BLEED AIR, OP PRESSURE: 60 PSIG	HTE250088
HTE9044-001	Hawker	HTE9044-001 : ACTUATOR	HTE9044-001
K38002-1	Hawker	K38002-1 : VALVE	K38002-1
K38002-2	Hawker	K38002-2 : VALVE, BAROMETRIC CONTROL	K38002-2
K39068	Hawker	K39068 : NON RETURN VALVE	K39068
K39117/1	Hawker	K39117/1 : VALVE	K39117/1
K39117-1	Hawker	K39117-1 : VALVE, BAROMATIC CONTROL	K39117-1
LDA150A8C	Hawker	LDA150A8C : CONTACTOR	LDA150A8C
LDA200B18C	Hawker	LDA200B18C : CONTACTOR	LDA200B18C OR 140-380020-0001
LDG150Y4	Hawker	LDG150Y4 : CONTACTOR	LDG150Y4
LT48A	Hawker	LT48A : CONVERTER	LT48A
LT52A	Hawker	LT52A : POWER SUPPLY	LT52A
M1285AC	Hawker	M1285AC : CHIME/TONE WARNING AMPLIFIER	M1285AC
MAP900-001	Hawker	MAP900-001 : VALVE	MAP900-001
MC10-14-01	Hawker	MC10-14-01 : MASK	MC10-14-01
MC10-14-104	Hawker	MC10-14-104 : OXYGEN MASK	MC10-14-104 OR MC10-14-124
MC10-14-124	Hawker	MC10-14-124 : OXYGEN MASK	MC10-14-104 OR MC10-14-124
MC10-14-151	Hawker	MC10-14-151 : MASK	MC10-14-151
MF10-03-02	Hawker	MF10-03-02 : OXYGEN MASK	MF10-03-02
MSM2906-02-2	Hawker	MSM2906-02-2 : POWER SWITCHING MODULE	MSM2906-02-2
N0904-1C	Hawker	N0904-1C : ALTERNATOR	N0904-1C
NF0075-667	Hawker	NF0075-667 : DETECTOR	NF0075-667
NF24016-415	Hawker	NF24016-415 : WINDSHIELD, LH	NF24016-157,NF24016-335, NF24016-385, NF24016-415
NF24016-416	Hawker	NF24016-416 : WINDSHIELD, RH	NF24016-158, NF24016-336, NF24016-386, NF24016-416
PC3Y251A	Hawker	PC3Y251A : STATIC INVERTER	PC3Y251A
PC50-2B	Hawker	PC50-2B : INVERTER	PC50-2B
RCA74-04	Hawker	RCA74-04 : UNIT,OXYGEN CONTROL	RCA74-04
S132-3-22	Hawker	S132-3-22 : FLAP POSITION TRANSMITTER	S132-3-22
S25-6UM50001AE	Hawker	S25-6UM50001AE : LEG ASSEMBLY	S25-6UM50001AE
S25-6UM50002AF	Hawker	S25-6UM50002AF : LEG ASSY, MAIN	S25-6UM50002AF
S25-6UM50003AF	Hawker	S25-6UM50003AF : SIDESTAY	S25-6UM50003AF
S25-6UM50004AF	Hawker	S25-6UM50004AF : SIDESTAY, MAIN GEA	S25-6UM50004AF
S25-8TE50001A	Hawker	S25-8TE50001A : LH ELEVATOR	S25-8TE50001A
S25-8TE50002A	Hawker	S25-8TE50002A : ELEVATOR RH	S25-8TE50002A
S25-8UD50006A	Hawker	S25-8UD50006A : DOOR N/W(WHITE	S25-8UD50006A
S25-8UM50009A	Hawker	S25-8UM50009A : FAIRING	S25-8UM50009A
S25-8WF50012A	Hawker	S25-8WF50012A : FLAP R/H	S25-8WF50012A
S25-8WS50005AD	Hawker	S25-8WS50005AD : OUTBOARD L/E, LH	S25-8WS50005AD
S25-8WS50042A	Hawker	S25-8WS50042A : CENTRE LEADING EDGE SPARE ASSEMBLY	S25-8WS50042A
S25-9TE50001AB	Hawker	S25-9TE50001AB : L/H ELEVATOR	S25-9TE50001AB
S25-9WG50001AB	Hawker	S25-9WG50001AB : LH AILERON	S25-9WG50001AB
S25UM50113AZ	Hawker	S25UM50113AZ : LEG, MAIN	S25UM50113AZ
S25UM50114AY	Hawker	S25UM50114AY : MAIN LEG	S25UM50114AY
S25UM50173AQ	Hawker	S25UM50173AQ : SIDESTAY	S25UM50173AQ
S25UM50174AQ	Hawker	S25UM50174AQ : SIDESTAY, MAIN RH	S25UM50174AQ
S25UN50029AJ	Hawker	S25UN50029AJ : DRAG STAY	S25UN50029AJ
S25UN50099AW	Hawker	S25UN50099AW : LEG	S25UN50099AW
S532-2-321	Hawker	S532-2-321 : INDICATOR GAUGE	S532-2-321

SCF1788	Hawker	SCF1788 : CONDITIONER	SCF1788
SPS-1607	Hawker	SPS-1607 : INVERTER	SPS-1607
SPS-6-1C-3242	Hawker	SPS-6-1C-3242 : SWITCH PANEL (HORIZONTAL VESTIBULE)	SPS-6-1C-3242
TFF1573-2	Hawker	TFF1573-2 : TRANSMITTER	TFF1573-2
TP42000	Hawker	TP42000 : SWITCH	TP42000
TP42001	Hawker	TP42001 : SWITCH, BRAKE PRES	TP42001
TY1684-01A	Hawker	TY1684-01A : FLAP CONTROL UNIT	TY1684-01A
U3626-2	Hawker	U3626-2 : CONTROL UNIT	U3626-2
WKA28790-3	Hawker	WKA28790-3 : VALVE	WKA28790-3
WKA29720-1	Hawker	WKA29720-1 : VALVE, OXYGEN PRES	WKA29720-1
WKA29720-2	Hawker	WKA29720-2 : VALVE	WKA29720-2
WKA35964-1	Hawker	WKA35964-1 : SHUT-OFF VALVE	WKA35964-1
WKA37447	Hawker	WKA37447 : OXYGEN CYLINDER (750 ML) *RA*	WKA37447
WL1605AM2	Hawker	WL1605AM2 : INDICATOR ,STANDBY ALTIMETER	WL1605AM2
WL1901KID1	Hawker	WL1901KID1 : FUEL CONTENT INDICATOR	WL1901KID1
WL656RSA7	Hawker	WL656RSA7 : RPM INDICATOR	WL656RSA7
WL717RSA3	Hawker	WL717RSA3 : INDICATOR	WL717RSA3
WL717RSA5	Hawker	WL717RSA5 : N1 % RPM INDICATOR	WL717RSA5
WL718RSA3	Hawker	WL718RSA3 : INDICATOR	WL718RSA3
WL718RSA5	Hawker	WL718RSA5 : ITT INDICATOR	WL718RSA5
XA9511E003-3	Hawker	XA9511E003-3 : PUMP	XA9511E003-3
XA9511E009	Hawker	XA9511E009 : PUMP	XA9511E009
XW20173M2	Hawker	XW20173M2 : W/S WIPER MOTOR	XW20173M2
01-0790029-03	King Air	01-0790029-03 : STROBE LIGHT ASSEMBLY	01-0790029-03
1/2-2-81-306	King Air	1/2-2-81-306 : TRANSMITTER	1/2-2-81-306
100-364371-7	King Air	100-364371-7 : CIRCUIT CARD ASSEM MOTOR CONT-AIR C	100-364371-7
100-380006-167	King Air	100-380006-167 : PROBE FUEL QUANTITY CAPACITANCE TYPE	100-380006-167
100-380006-171	King Air	100-380006-171 : FUEL QTY PROBE (NACELLE)	100-380006-171
100-380006-173	King Air	100-380006-173 : FUEL QUANTITY PROBE	100-380006-173
100-380006-175	King Air	100-380006-175 : FUEL QUANTITY PROBE	100-380006-175
100-380006-177	King Air	100-380006-177 : FUEL QUANTITY PROBE	100-380006-177
100-380006-183	King Air	100-380006-183 : FUEL QUANTITY PROBE	100-380006-183
100-380006-185	King Air	100-380006-185 : FUEL QTY PROBE	100-380006-185
100-380006-187	King Air	100-380006-187 : FUEL QUANTITY PROBE	100-380006-187
100-380006-187	King Air	100-380006-187 : FUEL QUANTITY PROBE	100-380006-183 (upgrade charges may be included)
100-380006-197	King Air	FUEL QUANTITY PROBE	100-380006-197
100-384040	King Air	100-384040 : FLAP MOTOR	100-384040
100-384049-3	King Air	100-384049-3 : TORQUE TRANSMITTER	100-384049-3
100-384054-1	King Air	100-384054-1 : VERTICAL SPEED INDICATOR	100-384054-1
100-384054-3	King Air	100-384054-3 : VERTICAL SPEED INDICATOR	100-384054-3
100-384072-5	King Air	100-384072-5 : COMPRESSOR DRIVE MOTOR	100-384072-5
100-384118-15	King Air	100-384118-15 : STROBE LIGHT ASSY (RED) NAV	100-384118-15
100-384118-16	King Air	100-384118-16 : STROBE LIGHT ASSY (GREEN) NAV	100-384118-16
100-384118-17	King Air	100-384118-17 : STROBE LIGHT ASSY (RED) NAV RECOG	100-384118-17
100-384118-18	King Air	100-384118-18 : STROBE LIGHT ASSY (GREEN) NAV RECOG	100-384118-18
100-384118-19	King Air	100-384118-19 : POWER SUPPLY	100-384118-19
100-384118-25	King Air	100-384118-25 : LIGHT ASSEMBLY	100-384118-13 OR 100-384118-25
100-384118-26	King Air	100-384118-26 : LIGHT ASSY	100-384118-26
100-389005-11	King Air	100-389005-11 : STARTER GEN'C SSTX	100-389005-11
100-389007	King Air	100-389007 : OIL PRESSURE TRANSMITTER	100-389007
100-524073-1	King Air	100-524073-1 : MOTOR AND GEARBOX ASSY-FLAP DRIVE	100-524073-1
101-364270-5	King Air	101-364270-5 : D C STATIC CONTROL PANEL	101-364270-5
101-364572-17	King Air	101-364572-17 : MODULE ASSEMBLY-ICEVAN SENSE & N1 SPEED	101-364572-17
101-364580-1	King Air	101-364580-1 : MODULE ASSEM-ANNUN FAULT DETECTION	101-364580-1
101-364584-5	King Air	101-364584-5 : MODULE ASSEM BATTERY MONITOR	101-364584-5
101-364668-1	King Air	101-364668-1 : MODULE ASSEM FUEL TRANSFER	101-364668-1
101-364715-1	King Air	101-364715-1 : CIRCUIT CARD ASSY, BUS TIE CONTROL	101-364715-1

101-380005-33	King Air	101-380005-33 : LIFT TRANSDUCER (3701-14)	101-380005-33
101-380013-11	King Air	101-380013-11 : PNEUMOSTAT	101-380013-11
101-380013-13	King Air	101-380013-13 : VALVE	101-380013-13, 101-380013-15, 101-380013-17
101-380013-15	King Air	101-380013-15 : FLOW CONTROL VALVE	101-380013-15, 101-380013-17, 101-380013-13
101-380013-17	King Air	101-380013-17 : VALVE	101-380013-17, 101-380013-15, 101-380013-13
101-380013-3	King Air	101-380013-3 : PNEUMOSTAT	101-380013-3
101-380019-1	King Air	101-380019-1 : VALVE ASSEMBLY-SOLNOID, REFRIGERATE12SYS	101-380019-1
101-380021-3	King Air	101-380021-3 : VALVE ASSEM-SOLENOID	101-380021-3
101-380025-11	King Air	101-380025-11 : CONTROLLER-FLOW CONTROL	101-380025-11
101-380025-17	King Air	101-380025-17 : CONTROLLER	101-380025-17
101-380025-21	King Air	101-380025-21 : FLOW CONTROL VALVE	101-380025-21
101-380027-1	King Air	101-380027-1 : VALVE, 3 PORT	101-380027-1
101-380027-3	King Air	101-380027-3 : REGULATOR & RELIEF VALVE ASSEMBLY	101-380027-3
101-380031-1	King Air	101-380031-1 : TURN & SLIP INDICATOR UNLIGHTED	101-380031-1
101-380031-11	King Air	101-380031-11 : TURN & SLIP INDICATOR - 2 IN (LIGHTED)	101-380031-11
101-380031-3	King Air	101-380031-3 : TURN & SLIP INDICATOR LIGHTED	101-380031-3
101-380032-3	King Air	101-380032-3 : TURN & SLIP INDICATOR	101-380032-3
101-380034-1	King Air	101-380034-1 : IVSI INDICATOR	101-380034-1
101-380068-5	King Air	101-380068-5 : AIRSPEED INDICATOR	101-380068-5
101-380080-3	King Air	101-380080-3 : INDICATOR-GYRO HORIZON, AIR	101-380080-3
101-380091-3	King Air	101-380091-3 : INDICATOR-TORQUE	101-380091-3
101-380091-5	King Air	101-380091-5 : TORQUE INDICATOR	101-380091-5
101-380092-9	King Air	101-380092-9 : INDICATOR,PROP RPM	101-380092-5 or 101-380092-9
101-380096-1	King Air	101-380096-1 : BRAKE ASSY-NON-ASBESTOS VPN 2-1576	101-380096-1 or 101-8001-91
101-381000-9	King Air	101-381000-9 : VALVE ASSY	101-381000-5 or 101-381000-9
101-381011-11	King Air	101-381011-11 : VALVE ASSEMBLY	101-381011-5 or 101-381011-11
101-381011-13	King Air	101-381011-13 : VALVE ASSEMBLY-BLEED AIR SHUT OFF	101-381011-5, 101-381011-11 or 101-381011-13
101-381011-9	King Air	101-381011-9 : VALVE ASSEMBLY	101-381011-1 or 101-381011-9
101-381012-5	King Air	101-381012-5 : VALVE ASSEMBLY - BLEED AIR SHUTOFF	101-381012-5
101-381012-7	King Air	101-381012-7 : VALVE ASSEMBLY-BLEED AIR SHUTOFF	101-381012-5 or 101-381012-7
101-381015-3	King Air	101-381015-3 : BLEED AIR VALVE ASSEMBLY	101-381015-3
101-384004-5	King Air	101-384004-5 : BLOWER ASSEMBLY	101-384004-5
101-384004-9	King Air	101-384004-9 : BLOWER ASSEMBLY	101-384004-5 (EM609-3) OR 101-384004-9
101-384008-3	King Air	101-384008-3 : TORQUE INDICATOR	101-384008-3
101-384032-7	King Air	101-384032-7 : VALVE ASSY-SHUTOFF,OXYGEN	101-384032-7
101-384074-11	King Air	101-384074-11 : AIRSPEED INDICATOR	10-381550-4
101-384074-13	King Air	101-384074-13 : AIRSPEED IND+CALB	101-384074-7 OR 101-384074-13
101-384078-1	King Air	101-384078-1 : VOLT METER	101-384078-1
101-384092-1	King Air	101-384092-1 : HOUR CLOCK	101-384092-1
101-384106-9	King Air	101-384106-9 : VOLT LOAD INDICATOR	101-384106-7 OR 101-384106-9
101-384107-1	King Air	101-384107-1 : INDICATOR - AC VOLT, FREQUENCY	101-384107-1
101-384107-3	King Air	101-384107-3 : VOLT FREQUENCY INDICATOR	101-384107-3
101-384135-3	King Air	101-384135-3 : BLOWER	101-384135-3
101-384137-7	King Air	101-384137-7 : SWITCH ASSEMBLY - LANDING GEAR CONTROL	101-384137-7 OR 101-384137-9
101-384140-1	King Air	101-384140-1 : REGULATOR & CYLINDER ASSEMBLY*RA	101-384140-1
101-384144-3	King Air	101-384144-3 : VALVE ASSEMBLY	101-384144-1 or 101-384144-3
101-384145-1	King Air	101-384145-1 : BOX ASSEMBLY	101-384145-1
101-384153-1	King Air	101-384153-1 : INDICATOR - FUEL FLOW	101-384153-1
101-384154-3	King Air	101-384154-3 : INDICATOR - INTERSTAGE TURBINE	101-384154-3
101-384154-7	King Air	101-384154-7 : INDICATOR - INTERSTAGE TURBINE	101-384154-7
101-384157-5	King Air	101-384157-5 : TACHOMETER - PROP, ELECTRIC, LIGHTED	101-384157-5
101-384159-7	King Air	101-384159-7 : ELECT TURBINE TACHOMETER INDICATOR	101-384159-7
101-384175-1	King Air	101-384175-1 : MONITOR AC POWER	101-384175-1
101-384176-1	King Air	101-384176-1 : VENTILATING BLOWER ASSEMBLY	101-384176-1
101-384176-3	King Air	101-384176-3 : FORWARD BLOWER ASSEMBLY	101-384176-3 OR 101-384176-1
101-384177-11	King Air	101-384177-11 : CONTROLLER ASSEMBLY	101-384177-11
101-384177-9	King Air	101-384177-9 : CONTROLLER ASSEMBLY	101-384177-9

101-384186-3	King Air	101-384186-3 : TORQUE INDICATOR	101-384186-3
101-384207-5	King Air	101-384207-5 : OXY CYL ASSY, W REGULATOR,77.9 CU FT*RA	101-384207-5
101-384233-1	King Air	101-384233-1 : VOLT & AMP INDICATOR	101-384233-1
101-388005-19	King Air	101-388005-19 : POWER PACK ASSY	101-388005-19
101-388005-21	King Air	101-388005-21 : POWER PACK ASSEMBLY	101-388005-7, 101-388005-9, 101-388005-11, 101-388005-21
101-388007-3	King Air	101-388007-3 : HAND PUMP	101-388007-3
101-388008-3	King Air	101-388008-3 : SERVICE VALVE	101-388008-3
101-388014-1	King Air	101-388014-1 : MAIN GEAR ACTUATOR	101-388014-1
101-388014-17	King Air	101-388014-17 : CYLINDER ASSY, MLG RETRACT	101-388014-17
101-388014-19	King Air	101-388014-19 : CYLINDER ASSEMBLY, MLG RETRACT	101-388014-19
101-389005-3	King Air	101-389005-3 : TRANSMITTER	101-389005-3
101-389007-1	King Air	101-389007-1 : STARTER GENERATOR	101-389007-1
101-389025-5	King Air	101-389025-5 : VALVE, FUEL SHUTOFF *RA*	101-389025-3 or 101-389025-5
101-389028-3	King Air	101-389028-3 : OIL COOLER	101-389028-3
101-389042-5	King Air	101-389042-5 : FUEL FLOW TRANSMITTER	101-389042-1 or 101-389042-5
101-389044-3	King Air	101-389044-3 : TORQUE TRANSMITTER	101-389044-3
101450-11952	King Air	101450-11952 : NTER POINTER ENCODING ALTIM	101450-11952
101450-11953	King Air	101450-11953 : COUNTER-POINTER ENCODE ALTIME	101450-11953
101-524072-1	King Air	101-524072-1 : ACTUATOR ASSEMBLY ELEVATOR TAB	101-524072-1
101-524072-7	King Air	101-524072-7 : ACT ASSEMBLY ELEVATOR TRIM TAB	101-524072-7
101-8001-47	King Air	101-8001-47 : WHEEL ASSEM	101-8001-47
101-8002-3	King Air	101-8002-3 : BRAKE ASSEMBLY	101-8002-3
101-810011-1	King Air	101-810011-1 : PISTON & AXLE ASSEM	101-810011-1
101-810045-1	King Air	101-810045-1 : AXLE & PISTON ASSEM	101-810045-1
103648-1	King Air	103648-1 : OUTFLOW/SAFETY VALVE	103648-1
103648-13	King Air	103648-13 : OUTFLOW VALVE	103648-13
103648-15	King Air	103648-15 : OUTFLOW VALVE	103648-15
103648-4	King Air	103648-4 : OUTFLOW/SAFETY VALVE	103648-4
103648-5	King Air	103648-5 : OUTFLOW/SAFETY VALVE	103648-5
103648-7	King Air	103648-7 : OUTFLOW/SAFETY VALVE-CABIN PRESSURIZATIO	103648-7
10379-11-01	King Air	10379-11-01 : ALTITUDE ALERTER	10379-11-01
109-384001-1	King Air	109-384001-1 : LOAD INDICATOR	109-384001-1
109-389002-9	King Air	109-389002-9 : FUEL SHUTOFF VALVE*RA	109-389002-9 or 109-389002-7
112-380022-21	King Air	112-380022-21 : ACTUATOR	112-380022-21
114-389039-23	King Air	114-389039-23 : ACTUATOR	114-389039-23
115-380002-5	King Air	115-380002-5 : MOTOR /LANDING GEAR RETRACT/	115-380002-5
115-380111-19	King Air	115-380111-19 : ACTUATOR ASSEM	115-380111-19
115-384002-9	King Air	115-384002-9 : EVAPORATOR COIL	115-384002-7 OR 115-384002-9
117-384019-3	King Air	117-384019-3 : FUEL QUANTITY INDICATOR	117-384019-3
127-384019-3	King Air	127-384019-3 : INVERTER	127-384019-3
128-380067-29	King Air	128-380067-29 : CREW OXYGEN MASK	128-380067-29
130-340097-1	King Air	130-340097-1 : P C BOARD ASSEMBLY AUDIO	130-340097-1
130346-1	King Air	130346-1 : CONTROL UNIT	130346-1
130346-12	King Air	130346-12 : CONTROLLER-CABIN PRESSURIZATION 6.5PSI	130346-12
130346-7	King Air	130346-7 : PRESS CONTROLLER	130346-7
130-364048-9	King Air	130-364048-9 : MODULE ASSEM ANNUNCIATOR CONT	130-364048-9
130-364054-5	King Air	130-364054-5 : MODULE ASSEMBLY A/C POWER MONITO	130-364054-5
130-364090-1	King Air	130-364090-1 : MODULE ASSY	130-364090-1
130-380005-3	King Air	130-380005-3 : AIRSPEED INDICATOR (MAX ALLOWABLE)	130-380005-3
130-380010-1	King Air	130-380010-1 : INDICATOR,FUEL FLOW	130-380010-1
130-380039-3	King Air	130-380039-3 : AIRSPEED INDICATOR MAXIMUM ALLOWABLE	130-380039-3
130-380041-7	King Air	130-380041-7 : INDICATOR,ITT	130-380041-7
130-380041-9	King Air	130-380041-9 : INDICATOR, ITT	130-380041-9
130-380042-3	King Air	130-380042-3 : INDICATOR-TORQUE	130-380042-3
130-380042-5	King Air	130-380042-5 : TORQUE INDICATOR	130-380042-5
130-380043-3	King Air	130-380043-3 : INDICATOR-PROP RPM(FL120,122-231)	130-380043-3

130-380043-5	King Air	130-380043-5 : INDICATOR-PROP RPM (POST FL232)	130-380043-5
130-380044-11	King Air	130-380044-11 : INDICATOR - TURBINE RPM	130-380044-11
130-380044-13	King Air	130-380044-13 : INDICATOR-TURBINE RPM	130-380044-13
130-380044-17	King Air	130-380044-17 : INDICATOR,TURBINE RPM	130-380044-17
130-380044-21	King Air	130-380044-21 : INDICATOR,TURBINE RPM	130-380044-21
130-380044-3	King Air	130-380044-3 : INDICATOR-TURBINE RPM	130-380044-3
130-380044-7	King Air	130-380044-7 : INDICATOR-TURBINE RPM	130-380044-7
130-380044-9	King Air	130-380044-9 : INDICATOR,TURBINE RPM	130-380044-9
130-380045-13	King Air	130-380045-13 : INDICATOR-OIL TEMP/PRESS	130-380045-13
130-380045-3	King Air	130-380045-3 : INDICATOR-OIL TEMP & PRESS	130-380045-3
130-380045-9	King Air	130-380045-9 : INDICATOR-OIL TEMP & PRESS	130-380045-9
1U149-001-6	King Air	1U149-001-6 : GYRO HORIZON	1U149-001-6
1U367-232-2	King Air	1U367-232-2 : GYRO HORIZON	1U367-232-2
2100-1010-00	King Air	2100-1010-00 : COCKPIT VOICE RECORDER (30 MIN)	2100-1010-00
23085-001	King Air	23085-001 : STARTER/GENERATOR	23085-001
28007-11-01	King Air	28007-11-01 : ENCODING ALTIMETER	28007-11-01 or 28007-01-01 (note that there will be an upgrade charge of \$4033.00 for this)
30301102	King Air	30301102 : CONTAINER FIRE EXTINGUISHER *RA*	M71050-1
30400018-3	King Air	30400018-3 : FIRE EXTINGUISHER*RA	30400018-1 or 30400018-3
3244745-4	King Air	3244745-4 : FUEL CONTROL-2 ENG	3244745-4
3701-2	King Air	3701-2 : LIFT TRANSDUCER	3701-2 and 101-380005-9
44929-412	King Air	44929-412 : ENCODING ALTIMETER	44929-412
45100D4010	King Air	45100D4010 : ALTITUDE ALERT	45100D4010
50-380034-3	King Air	50-380034-3 : TURBINE INDICATOR	50-380034-3
50-380035-1	King Air	50-380035-1 : PROP TACHOMETER	50-380035-1
50-380035-5	King Air	50-380035-5 : PROP TACHOMETER	50-380035-5
50-380046-19	King Air	50-380046-19 : DIFF PRESSURE INDICATOR	50-380046-19
50-380105-1	King Air	50-380105-1 : GAUGE	50-380105-1
50-380177-5	King Air	50-380177-5 : FUEL PUMP *RA	50-380177-5
50-380177-7	King Air	50-380177-7 : FUEL PUMP VPV 1D2-13 *RA	50-380177-7 OR 1D2-13
50-384203-3	King Air	50-384203-3 : ATTITUDE GYRO	50-384203-3
50-384205	King Air	50-384205 : DIRECTIONAL GYRO	50-384205
50-389057-1	King Air	50-389057-1 : TACH GENERATOR	50-389057-1
50-389094-5	King Air	50-389094-5 : FUEL TRANSFER PUMP	50-389094-5
50-389096-1	King Air	50-389096-1 : SOLENOID VALVE	50-389096-1
50-820004-3	King Air	50-820004-3 : DAMPENER ASSEMBLY	50-820004-3
50-990115-35	King Air	50-990115-35 : GEAR BOX ASSEM	50-990115-35
51538-001A	King Air	51538-001A : GENERATOR CONTROL UNIT	51538-001A
6900053-003	King Air	6900053-003 : POWER SUPPLY, COLD CATHODE	6900053-003
700-006	King Air	700-006 : AUDIO AMPLIFIER	700-006
795-13	King Air	795-13 : LIFT TRANSDUCER	795-13
90033-8	King Air	90033-8 : ANTI COLLISION LIGHT ASSY	90033-8
90-380028-7	King Air	90-380028-7 : MAX ALLOWABLE AIRSPEED INDICATOR	90-380028-7
90-380029-3	King Air	90-380029-3 : LIGHT ASSY	90-380029-3
90-380033-5	King Air	90-380033-5 : INDICATOR,ITT	90-380033-5
90-380034-5	King Air	90-380034-5 : INDICATOR-TORQUE	90-380034-5
90-380035-9	King Air	90-380035-9 : INDICATOR,PROP RPM	90-380035-9
90-380036-5	King Air	90-380036-5 : INDICATOR - OIL TEMP & PRESS	90-380036-5
90-380037-1	King Air	90-380037-1 : INDICATOR - FUEL FLOW	90-380037-1
90-380038-1	King Air	90-380038-1 : BRAKE ASSEMBLY-NON-ASBESTOS	90-380038-1
90-384026-31	King Air	90-384026-31 : ITT INDICATOR	90-384026-31
90-384031-1	King Air	90-384031-1 : BLOWER ASSEMBLY VENTILATING	90-384031-1
90-388000-1	King Air	90-388000-1 : HYDRAULIC LANDING GEAR ACTUATOR ASSY	90-388000-1
90-388000-5	King Air	90-388000-5 : ACTUATOR ASSY - HYDRAULIC, MLG	90-388000-5
91-380002-3	King Air	91-380002-3 : LANDING GEAR MOTOR	91-380002 or 91-380002-3
91-380003-3	King Air	91-380003-3 : FUEL PUMP*RA	91-380003 or 91-380003-3
97-380000-17	King Air	97-380000-17 : THERMOSTAT	97-380000-17

97-380000-33	King Air	97-380000-33 : FLOW CONTROL VALVE	97-380000-33 OR 97-380000-31
99-388002-15	King Air	99-388002-15 : POWER PACK	99-388002-15
99-388007-3	King Air	99-388007-3 : LIQUID LEVEL SENSOR	99-388007-3
9B-81040-20	King Air	9B-81040-20 : ANALOG INTERFACE UNIT	9B-81040-20
9D-80130-31	King Air	9D-80130-31 : AIR DATA DISPLAY UNIT	9D-80130-31
HYLZ50336-001	King Air	HYLZ50336-001 : TEMP CONTROLLER	HYLZ50336-001
HYLZ50336-011	King Air	HYLZ50336-011 : CABIN TEMP CONTROLLER	HYLZ50336-011
PC17	King Air	PC17 : INVERTER 600VA	PC17
PC17A	King Air	PC17A : INVERTER	PC17A
SPC-60A	King Air	SPC-60A : INVERTER (600VA)	SPC-60A
102-364059-1	Piston	102-364059-1 : P/C BOARD ASSEM FL RELAY	102-364059-1
102-380011-25	Piston	102-380011-25 : TACHOMETER	102-380011-25
102-380011-29	Piston	102-380011-29 : TACHOMETER	102-380011-29
102-380013-5	Piston	102-380013-5 : CYL HEAD TEMP & TIT INDICATOR	102-380013-5
102-380014-3	Piston	102-380014-3 : OIL TEMP & PRESS INDICATOR	102-380014-3
102-380024-1	Piston	102-380024-1 : PROP SYNC INDICATOR	102-380024-1
102-384039-1	Piston	102-384039-1 : LIGHT CONTROLLER PANEL INST.	102-384039-1
151-10	Piston	151-10 : LIFT DETECTOR	151-10
190-3	Piston	190-3 : LIFT DETECTOR	190-3
191-61	Piston	191-61 : LIFT DETECTOR	191-61
213699	Piston	213699 : SYNCHRONIZER CONTROL BOX	213699
35-825145-2	Piston	35-825145-2 : DAMPNER ASSEM NOSE	35-825145-2
3601-56	Piston	3601-56 : LIFT COMPUTER	3601-56
36-380048-1	Piston	36-380048-1 : GENERATOR	36-380048-1
36-380056-1	Piston	36-380056-1 : VOLTAGE REGULATOR	36-380056-1
3701-10	Piston	3701-10 : STALL LIFT TRANSDUCER	3701-10
4404-00-7NV	Piston	4404-00-7NV : BOOST PUMP	4404-00-7NV or 4404-00-1
4613-00-5	Piston	4613-00-5 : FUEL BOOST PUMP	4613-00-5
58-364058-13	Piston	58-364058-13 : PC BOARD ASSEM FUEL QTY	58-364058-13
58-364058-7	Piston	58-364058-7 : P C BOARD ASSEM-FUEL QTY	58-364058-7
58-364058-9	Piston	58-364058-9 : PC BOARD ASSEM FUEL QTY	58-364058-9
58-380069-3	Piston	58-380069-3 : ALTIMETER	58-380069-3
58-380080-3	Piston	58-380080-3 : ACTUATOR	58-380080-3
58-380090-0007	Piston	58-380090-0007 : MOTOR - LANDING GEAR RETRACT	58-380090-0007
58-380090-1	Piston	58-380090-1 : LANDING GEAR MOTOR	58-380090-1
58-380094-9	Piston	58-380094-9 : TURN COORDINATOR	58-380094-9
58-380104-5	Piston	58-380104-5 : CYLINDER HEAD TEMP & EGT INDICATOR	58-380104-5
58-380106-3	Piston	58-380106-3 : MANIFOLD PRESSURE INDICATOR	58-380106-3 (UNITED INSTRUMENT ONLY)
58-380109-3	Piston	58-380109-3 : VALVE ASSY	58-380109-3
95-810017-23	Piston	95-810017-23 : ACTUATOR ASSEMBLY	95-810017-23
96-380021-17	Piston	96-380021-17 : ACTUATOR	96-380021-17
96-380021-33	Piston	96-380021-33 : ACTUATOR	96-380021-27 OR 96-380021-33
96-380030-13	Piston	96-380030-13 : GOVERNOR W/SYNCH PROVISIONS	96-380030-13
0871KK2	Premier	0871KK2 : ICE DETECTOR	0871KK2
1/2-1-81-302	Premier	1/2-1-81-302 : FUEL FLOW TRANSMITTER	1/2-1-81-302
1134960-3	Premier	1134960-3 : COMPRESSOR ASSEMBLY	1134960-3
1260470-3	Premier	1260470-3 : SOFT START MODULE	1260470-3
2100-1010-51	Premier	2100-1010-51 : COCKPIT VOICE RECORDER	2100-1010-51
2100-1020-51	Premier	2100-1020-51 : COCKPIT VOICE RECORDER	2100-1020-51
3-1576	Premier	3-1576 : MAIN WHEEL ASSEMBLY	3-1576
390-381006-0005	Premier	390-381006-0005 : HYDRAULIC SPOILER CONTROL MODULE	390-381006-0005
390-381007-0003	Premier	390-381007-0003 : ACTUATOR - SPOILER SYSTEM	390-381007-0003
390-381009-0007	Premier	390-381009-0007 : ACTUATOR ASSEMBLY - AILERON TRIM TAB LH	390-381009-0005 OR 390-381009-0007
390-381009-0008	Premier	390-381009-0008 : ACTUATOR ASSEMBLY - AILERON TRIM TAB RH	390-381009-0006 OR 390-381009-0008
390-381010-0001	Premier	390-381010-0001 : ACTUATOR-SPOILER SYSTEM	390-381010-0001
390-381012-0001	Premier	390-381012-0001 : CONTROL WHEEL POSITION SENSOR	390-381012-0001
390-381201-0005	Premier	390-381201-0005 : ACTUATOR, UPLOCK RELEASE	390-381201-0005

390-381401-0013	Premier	390-381401-0013 : FLAP CONTROL UNIT	390-381401-0013 (LIKE FOR LIKE ONLY)
390-381402-0017	Premier	390-381402-0017 : ACTUATOR,FLAP POSITION 1R&3L	-0005, -0009, -0013 are good cores for -0017
390-381402-0018	Premier	390-381402-0018 : ACTUATOR,FLAP POSITION 1R&3L	-0006, -0010, -0014 are good cores for -0018
390-381402-0019	Premier	390-381402-0019 : ACTUATOR,FLAP POSITION 2L	-0007, -0011, -0015 are good cores for -0019
390-381402-0020	Premier	390-381402-0020 : ACTUATOR,FLAP POSITION 2R	-0008, -0012, -0016 are good cores for -0020
390-381403-0011	Premier	390-381403-0011 : ACTUATOR,FLAP POSITION 5R&5L	-0003, -0007, and -0009 are good cores for -0011
390-382002-0001	Premier	390-382002-0001 : ALTIMETER	390-382002-0001
390-382009-0003	Premier	390-382009-0003 : INDICATOR - HYD PRESSURE	390-382009-0003
390-382010-0005	Premier	390-382010-0005 : INDICATOR-OXYGEN	390-382010-0003 or 390-382010-0005
390-382031-0003	Premier	390-382031-0003 : DISPLAY,LCD,DC VOLTS	390-382031-0003
390-382032-0003	Premier	390-382032-0003 : FUEL QUANTITY INDICATOR	390-382032-0003
390-382032-0007	Premier	390-382032-0007 : FUEL QUANTITY INDICATOR	390-382032-0007
390-382032-0011	Premier	390-382032-0011 : DISPLAY - LCD, FUEL QTY INDICATOR	390-382032-0011
390-382034-0005	Premier	390-382034-0005 : DISPLAY - LCD, PITCH TRIM INDICATOR	390-382034-0005
390-382037-0003	Premier	390-382037-0003 : DISPLAY,LCD,FLAP POSITION	390-382037-0003
390-382039-0005	Premier	390-382039-0005 : STANDBY INDICATOR - AIRSPEED	390-382039-0003 OR 390-382039-0005
390-382042-0001	Premier	390-382042-0001 : INDICATOR,STBY	390-382042-0001
390-382042-0003	Premier	390-382042-0003 : INDICATOR - ALTIMETER, STANDBY	390-382042-0003
390-382044-0001	Premier	390-382044-0001 : BOX-OXYGEN MASK, CREWSTATIO	390-382044-0001
390-382045-0001	Premier	390-382045-0001 : OXYGEN MASK - CREWSTATION	390-382045-0001
390-382059-0002	Premier	390-382059-0002 : PITOT STATIC TUBE	390-382059-0002
390-384003-0001	Premier	390-384003-0001 : LANDING LIGHT	390-384003-0001
390-384005-0009	Premier	390-384005-0009 : GENERATOR CONTROL UNIT	390-384005-0007 OR 390-384005-0009
390-384011-0017	Premier	390-384011-0017 : SPOILER CONTROL UNIT	390-384011-0017
390-384011-0019	Premier	390-384011-0019 : SPOILER CONTROL UNIT	390-384011-0019
390-384013-0005	Premier	390-384013-0005 : DEICE CONTROL UNIT	390-384013-0005
390-384014-0001	Premier	390-384014-0001 : POWER SUPPLY STROBE LIGHT,AFT	390-384014-0001
390-384024-0007	Premier	390-384024-0007 : OUTFLOW VALVE-PRESSURIZATION CONTROL SYS	390-384024-0001, 390-384024-0003, 390-384024-0005, 390-384024-0007
390-384025-0005	Premier	390-384025-0005 : OUTFLOW VALVE-PRESS. CONTROL	390-384025-0005
390-384027-0001	Premier	390-384027-0001 : STANDBY POWER SUPPLY	390-384027-0001
390-384028-0009	Premier	390-384028-0009 : PITCH TRIM CONTROLLER	390-384028-0009
390-384033-0001	Premier	390-384033-0001 : BEACON LIGHT	390-384033-0001
390-384061-0003	Premier	390-384061-0003 : AUXILLARY ROLL TRIM CONTROLLER	390-384061-0001 or 390-384061-0003
390-384300-0003	Premier	390-384300-0003 : POWER BRAKE VALVE	390-384300-0003
390-384403-0007	Premier	390-384403-0007 : HYDRAULIC PACKAGE	390-384403-0007
390-384403-0009	Premier	390-384403-0009 : HYDRAULIC PACKAGE	390-384403-0009
390-385011-0009	Premier	390-385011-0009 : TEMPERATURE CONTROLLER	390-385011-0001, 390-385011-0005, 390-385011-0007, 390-385011-0009
390-385014-0003	Premier	390-385014-0003 : PRESSURIZATION CONTROLLER	390-385014-0001 or 390-385014-0003
390-385016-0001	Premier	390-385016-0001 : TEMPERATURE MODULATING VALVE	390-385016-0001
390-385024-0005	Premier	390-385024-0005 : BLOWER ASSY, CENTRIFUGAL, VARIABLE SPEED	390-385024-0005
390-385026-0003	Premier	390-385026-0003 : COMPRESSOR & MOTOR MODULE -AIR CONDITION	390-385026-0003
390-385033-0001	Premier	390-385033-0001 : HEAT EXCHANGER	390-385033-0001
390-385034-0007	Premier	390-385034-0007 : BLOWER ASSEMBLY -CONDENSER	390-385034-0003 OR 390-385034-0007
390-385035-0003	Premier	390-385035-0003 : VALVE - FLOW CONTROL, BI-LEVEL	390-385035-0001 or 390-385035-0003
390-385036-0011	Premier	390-385036-0011 : VALVE-PRESSURE REG. SHUTOFF W/CHECK	390-385036-0007 or 390-385036-0011
390-386000-0001	Premier	390-386000-0001 : ENERGY STORAGE BANK	390-386000-0001
390-386003-0003	Premier	390-386003-0003 : ACTUATOR - RUDDER TRIM TAB	390-386003-0003
390-388100-0009	Premier	390-388100-0009 : LH MLG ACTUATOR	390-388100-0005, 390-388100-0007, 390-388100-0009
390-388100-0010	Premier	390-388100-0010 : RH MLG ACTUATOR	390-388100-0006, 390-388100-0008, 390-388100-0010
390-388103-0007	Premier	390-388103-0007 : BRAKE ASSEMBLY - MLG	390-388103-0001, 390-388103-0003, 390-388103-0007
390-388112-0009	Premier	390-388112-0009 : VALVE - MLG ALT EXTEND	390-388112-0005, 390-388112-0007, 390-388112-0009
390-388114-0001	Premier	390-388114-0001 : RESTRICTOR - MLG EXTEND	390-388114-0001
390-388200-0001	Premier	390-388200-0001 : ACTUATOR-NOSE L/G	390-388200-0001
390-389001-0001	Premier	390-389001-0001 : STARTER GENERATOR	390-389001-0001
390-389022-0003	Premier	390-389022-0003 : HYDRAULIC PUMP	390-389022-0003
390-389028-0005	Premier	390-389028-0005 : SENSOR	390-389028-0003 OR 390-389028-0005
438-006	Premier	438-006 : AUDIO AMPLIFIER	438-006

501-1828-01	Premier	501-1828-01 : ATTITUDE INDICATOR,STBY	501-1828-01
5188-00-1	Premier	5188-00-1 : ANTI-ICE SHUT-OFF VALVE	5188-00-1
101-384137-9	King Air	101-384137-9 : SWITCH ASSEMBLY - LANDING GEAR CONTROL	101-384137-9 OR 101-384137-7





